

RMVE-1D 120V
RMVE-2D 230V
RMVE-9D 100V
 COMPLETE REWORK STATION
 WITH PNEUMATIC PUMP
 From serie 194804

SPARE PARTS

DDE-1B / DDE-2B / DDE-9B:

-REAR CIRCUIT	0018129
-ENCLOSURE	
· TOP	0019028
· BOTTOM	0014567
· FRONT+DISPLAY	0016312
· BACK	0013413

MVE-A:

-CIRCUIT	0018455
-ENCLOSURE	
· TOP	0014860
· BOTTOM	0014861
· FRONT	0014688
· BACK	0014862
-SOLENOID VALVE	0006813

DDE-1B 120V FUSE T-4A
 DDE-2B 230V FUSE T-2A
 DDE-9B 100V FUSE T-5A

SPARE PARTS

JTSE-1A / JTSE-2A

-ENCLOSURES:	
· TOP	0019028
· BOTTOM	0013486
· FRONT+DISPLAY	0016862
· BACK	0016812



JTSE-1A

-CIRCUIT	0017185
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970

JTSE-2A













-CIRCUIT	0019303
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTSE-1A 120V FUSE T-8A
 JTSE-2A 230V FUSE T-4A

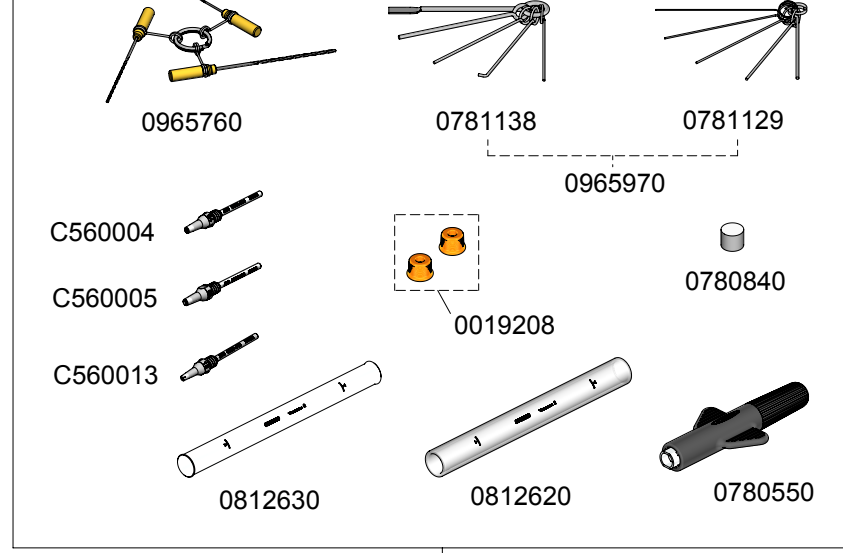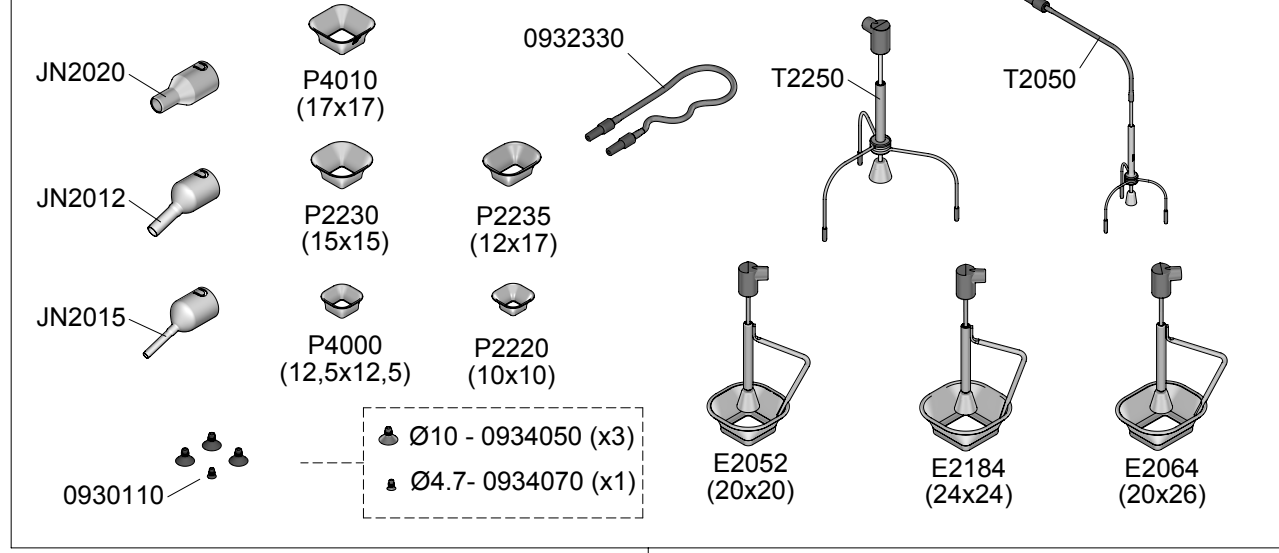

DDE-1B / DDE-2B / DDE-9B

JTSE-1D / JTSE-2D

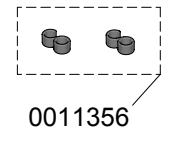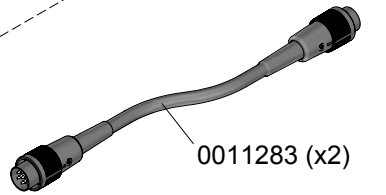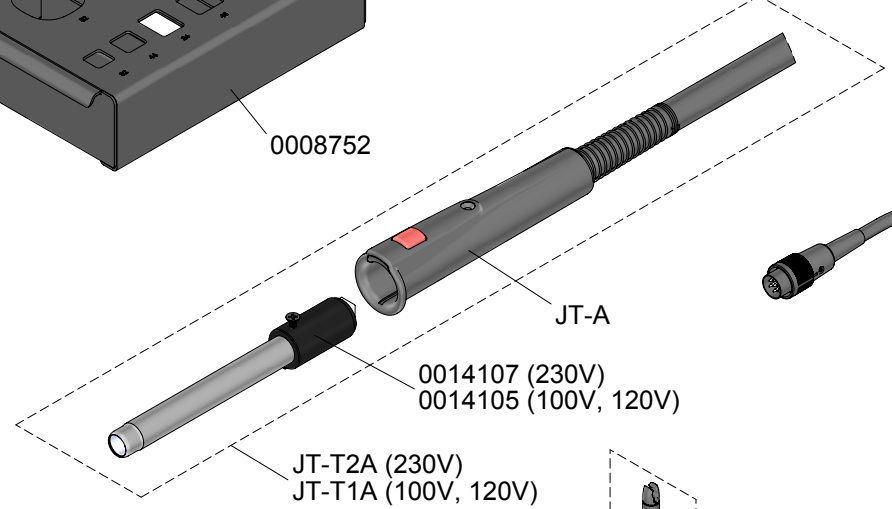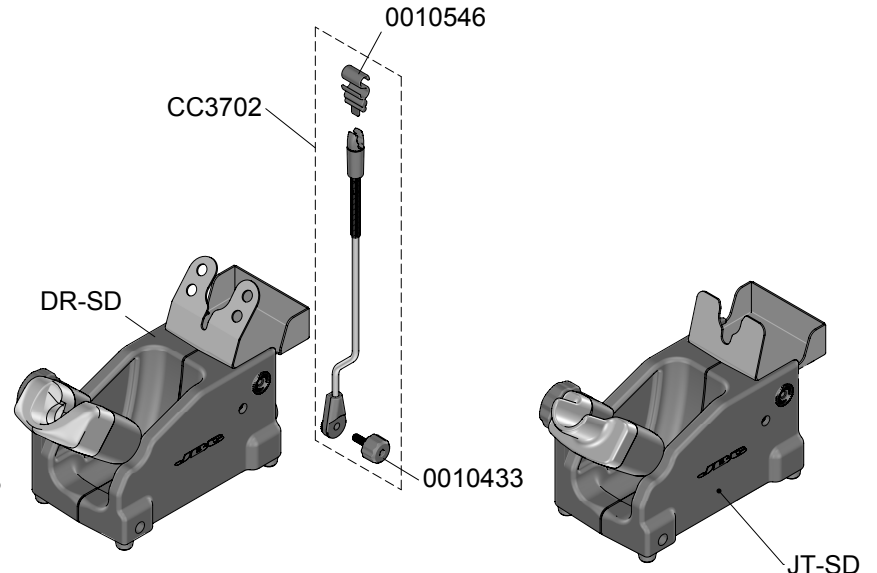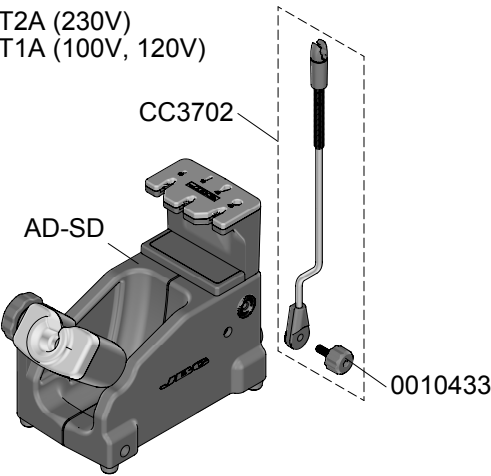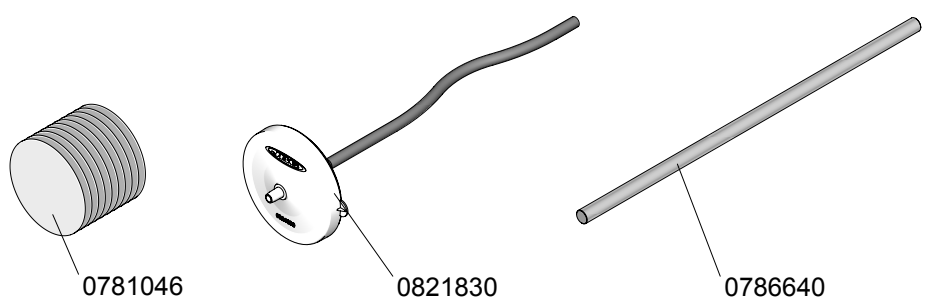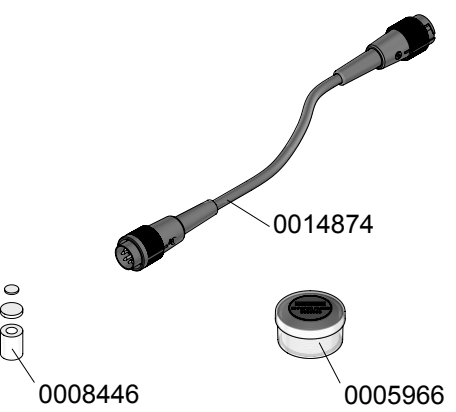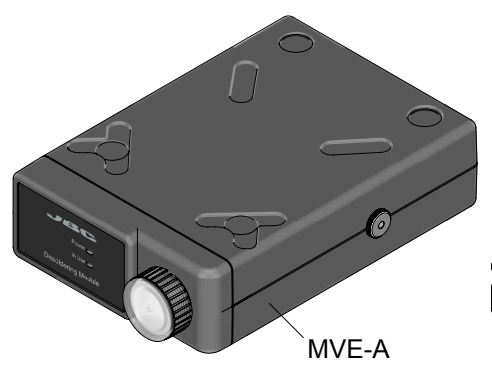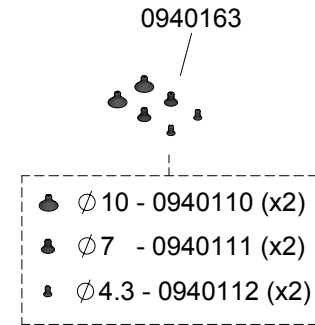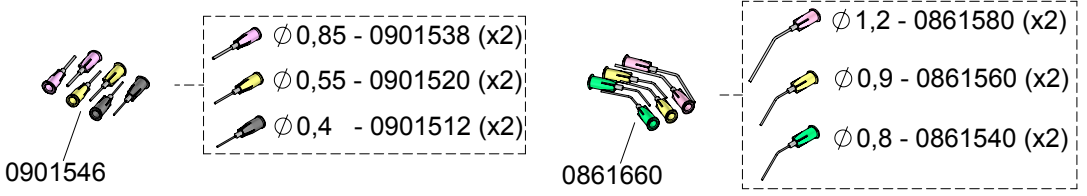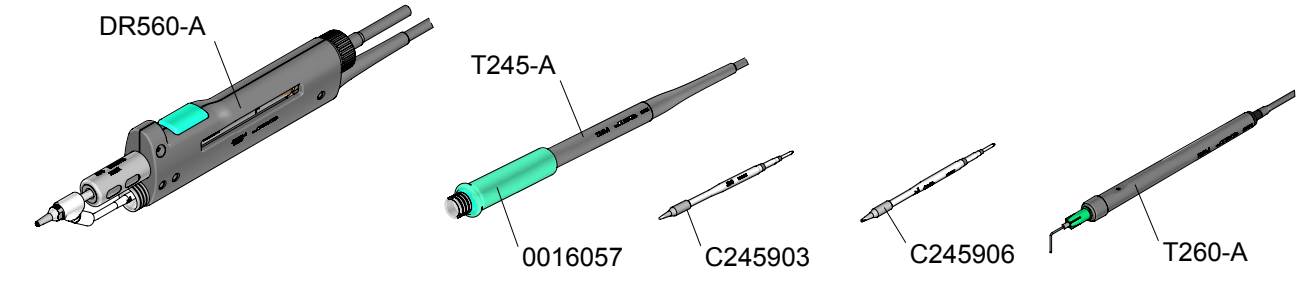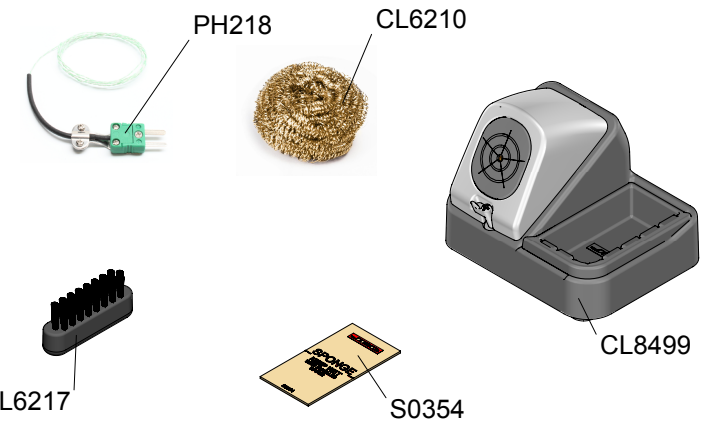

0012332

0010211

0008752

JT-A

0014107 (230V)
0014105 (100V, 120V)

JT-T2A (230V)
JT-T1A (100V, 120V)

CC3702

AD-SD

0010433

DR-SD

CC3702

0010433

0010546

JT-SD