


JTSE-1A 100/120V
JTSE-2A 230V


HOT AIR STATION

SPARE PARTS	
JTSE-1A / JTSE-2A	
-ENCLOSURES:	
·TOP	0019028
·BOTTOM	0013486
·FRONT	0016862
·BACK	0021065
JTSE-1A	
-CIRCUIT	0017185
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970
JTSE-2A	
-CIRCUIT	0019303
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTSE-1A 100/120V FUSE T-8A
JTSE-2A 230V FUSE T-4A

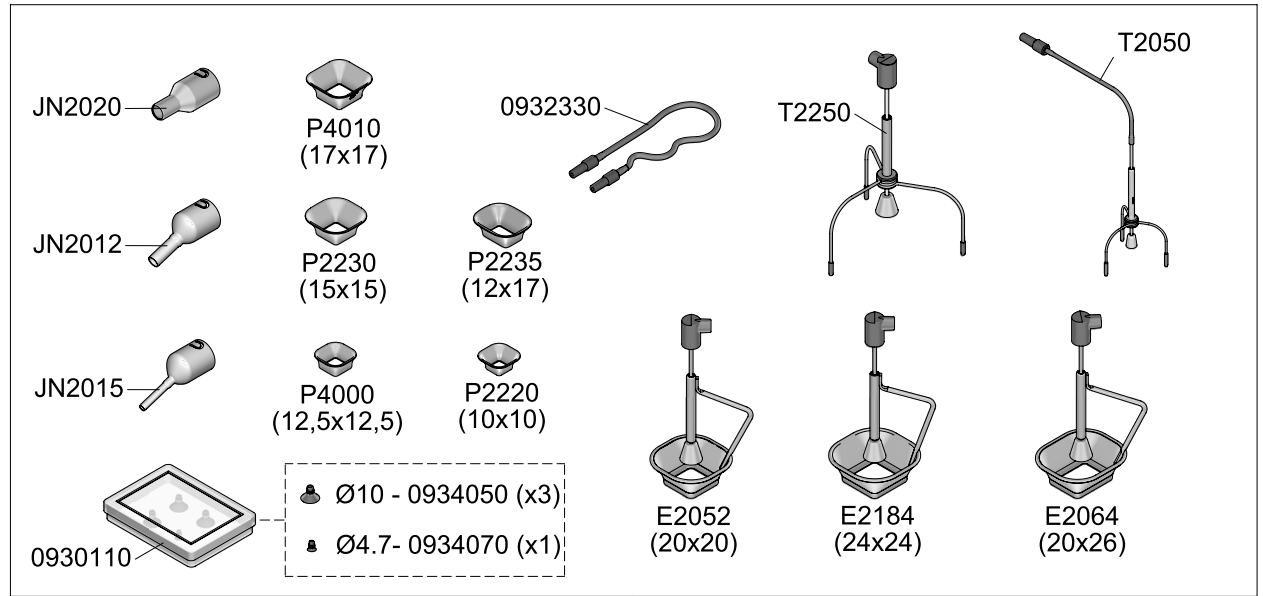

0012332

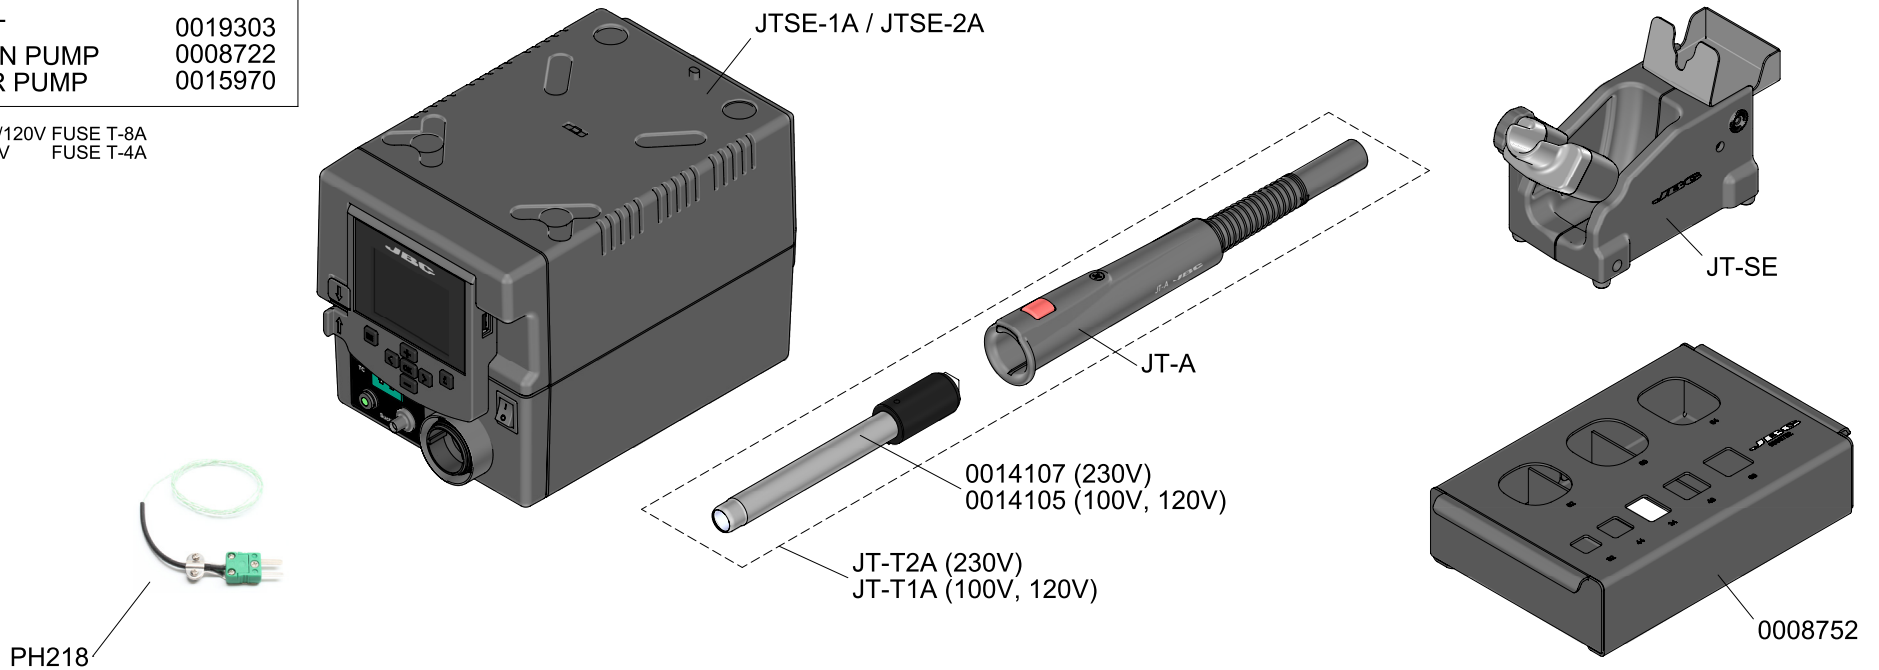

PH218

JTSE-1A / JTSE-2A

JT-A

0014107 (230V)
 0014105 (100V, 120V)

JT-T2A (230V)
 JT-T1A (100V, 120V)

JT-SE

0008752