

RMST-2B 230V
RMST-1B 120V
RMST-9B 100V
REWORK STATION
 FROM SERIE 156486

SPARE PARTS	
DD-2B / DD-1B / DD-9B:	
-CIRCUIT	0011198
-ENCLOSURES:	
- TOP	0011035
- BOTTOM	0009771
- FRONT	0010064
- BACK	0010366
MS-A:	
-CIRCUIT	0006545
-ENCLOSURES:	
- TOP	0008197
- BOTTOM	0008198
- FRONT	0008835
- BACK	0008199
-PUMP	0005652

DD-2B 230V FUSE T-2A
 DD-1B 120V FUSE T-4A
 DD-9B 100V FUSE T-4A

SPARE PARTS	
JT-2B / JT-1B / JT-9B:	
-ENCLOSURES:	
- TOP	0011035
- BOTTOM	0009772
- FRONT	0010064
- BACK	0012672
-FRONT CIRCUIT	0011524
JT-2B:	
-TOP CIRCUIT	0011521
-SUCTION PUMP	0008938
-HOT AIR PUMP	0012273
JT-1B / JT-9B:	
-TOP CIRCUIT	0011523
-SUCTION PUMP	0008940
-HOT AIR PUMP	0012272

JT-2B 230V FUSE T-4A
 JT-1B 120V FUSE T-8A
 JT-9B 100V FUSE T-8A

