

**RMSE-1B 120V**  
**RMSE-2B 230V**  
**RMSE-9B 100V**  
**COMPLETE REWORK STATION**  
**WITH ELECTRIC PUMP**

**SPARE PARTS**

**DDE-1B / DDE-2B / DDE-9B:**

-REAR CIRCUIT	0015121
-ENCLOSURE	
- TOP	0011035
- BOTTOM	0014567
- FRONT+DISPLAY	0016151
- BACK	0013413

**MSE-A:**

-CIRCUIT	0014058
-ENCLOSURE	
- TOP	0015266
- BOTTOM	0014010
- FRONT	0014688
- BACK	0015261
-PUMP	0005652

DDE-1B 120V FUSE T-4A  
 DDE-2B 230V FUSE T-2A  
 DDE-9B 100V FUSE T-5A

**SPARE PARTS**

**JT-1B / JT-2B / JT-9B:**

-ENCLOSURE	
- TOP	0011035
- BOTTOM	0009772
- FRONT	0010064
- BACK	0012672

**JT-2B:**

-CIRCUIT	0013983
-SUCTION PUMP	0008722
-HOT AIR PUMP	0014271

**JT-1B / JT-9B:**

-CIRCUIT	0013981
-SUCTION PUMP	0008723
-HOT AIR PUMP	0014270

JT-1B 120V FUSE T-8A  
 JT-2B 230V FUSE T-4A  
 JT-9B 100V FUSE T-8A

