


DDVT-2B 230V
DDVT-1B 120V
DDVT-9B 100V

SOLDERING / DESOLDERING STATION
 FROM SERIE 139783

SPARE PARTS	
DD-2B / DD-1B / DD-9B:	
-CIRCUIT	0009765
-ENCLOSURES:	
· TOP	0009231
· BOTTOM	0009771
· FRONT	0010064
· BACK	0010366
MV-A:	
-CIRCUIT	0006811
-ENCLOSURES:	
· TOP	0008843
· BOTTOM	0008844
· FRONT	0008835
· BACK	0008845
-PUMP	0006813

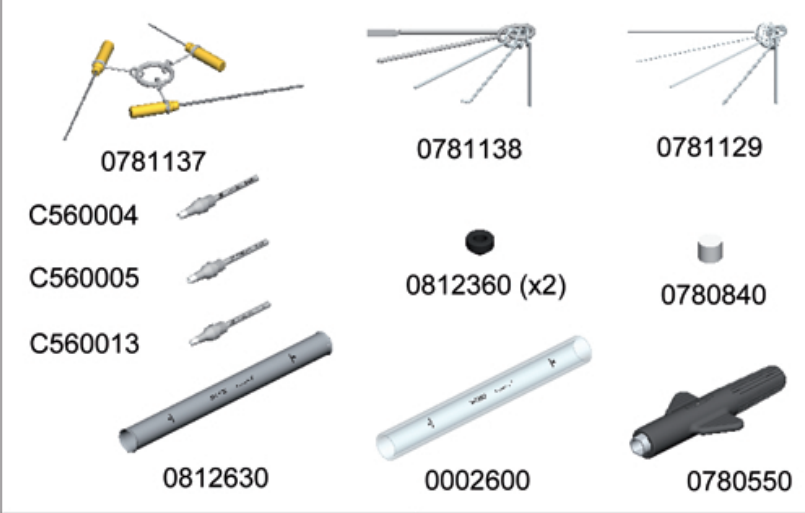

DD-2B / DD-1B / DD-9B



DDVT-2B 230V FUSE T-2A
 DDVT-1B 120V FUSE T-4A
 DDVT-9B 100V FUSE T-4A

