

RMVE-1A 120V
RMVE-2A 230V
RMVE-9A 100V



COMPLETE REWORK STATION WITH PNEUMATIC PUMP

SPARE PARTS	
DDE-1A / DDE-2A / DDE-9A:	
-REAR CIRCUIT	0014997
-ENCLOSURE	
- TOP	0011035
- BOTTOM	0014567
- FRONT+DISPLAY	0014612
- BACK	0013413
MVE-A:	
-CIRCUIT	0014059
-ENCLOSURE	
- TOP	0014860
- BOTTOM	0014861
- FRONT	0014688
- BACK	0014862
-SOLENOID VALVE	0006813

SPARE PARTS	
JT-1B / JT-2B / JT-9B:	
-ENCLOSURE	
- TOP	0011035
- BOTTOM	0009772
- FRONT	0010064
- BACK	0012672
JT-2B:	
-CIRCUIT	0013983
-SUCTION PUMP	0008722
-HOT AIR PUMP	0012273
JT-1B / JT-9B:	
-CIRCUIT	0013981
-SUCTION PUMP	0008723
-HOT AIR PUMP	0012272










DDE-1A 120V FUSE T-4A
 DDE-2A 230V FUSE T-2A
 DDE-9A 100V FUSE T-5A

JT-1B 120V FUSE T-8A
 JT-2B 230V FUSE T-4A
 JT-9B 100V FUSE T-8A

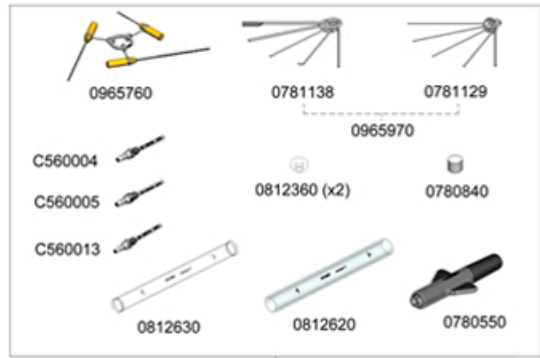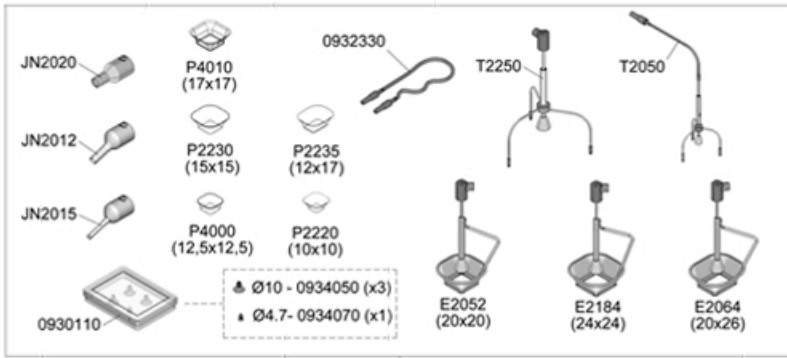

DDE-1A / DDE-2A / DDE-9A

JT-1B / JT-2B / JT-9B

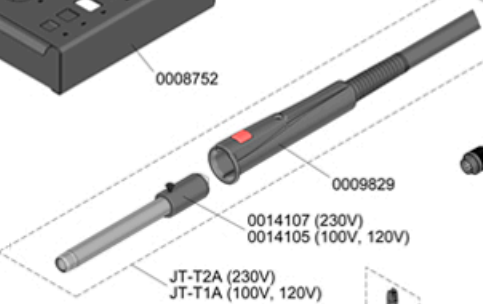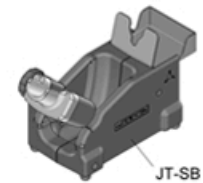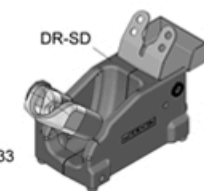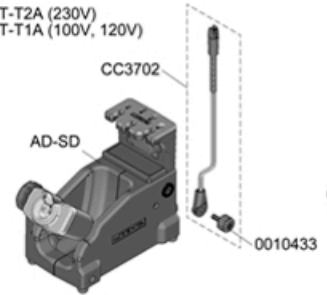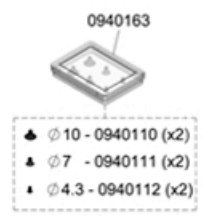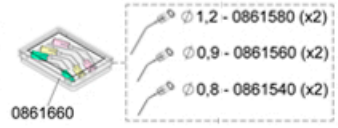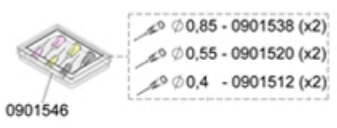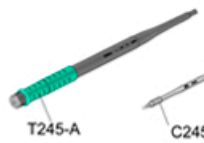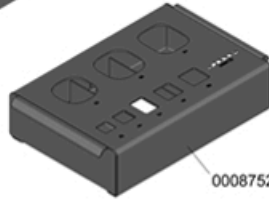

0014107 (230V)
 0014105 (100V, 120V)

JT-T2A (230V)
 JT-T1A (100V, 120V)