



JT-1QD 120V
JT-2QD 230V
JT-9QD 100V

**HOT AIR STATION
 WITHOUT EXTRACTOR DESK**

SPARE PARTS	
JTE-1D / JTE-2D / JTE-9D:	
-ENCLOSURES:	
·TOP	0011035
·BOTTOM	0014882
·FRONT	0010064
·BACK	0014982
JTE-1D / JTE-9D:	
-CIRCUIT	0016430
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970
JTE-2D:	
-CIRCUIT	0016428
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTE-1D 120V FUSE T-8A
 JTE-2D 230V FUSE T-4A
 JTE-9D 100V FUSE T-8A

JTE-1D / JTE-2D / JTE-9D

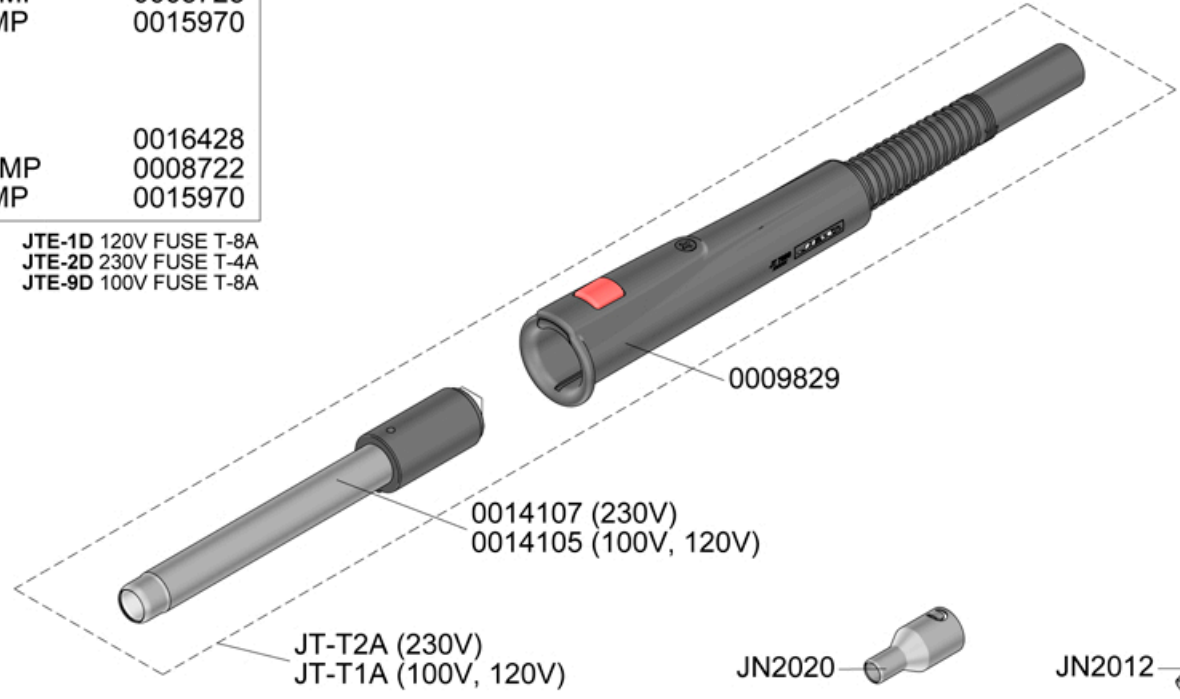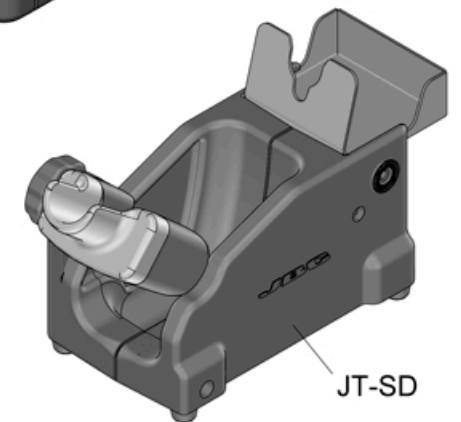

JT-SD