

RMST-2A 230V
 RMST-1A 120V
 RMST-9A 100V

REWORK STATION

FROM SERIE 148318

SPARE PARTS	
DD-2B / DD-1B / DD-9B:	
-CIRCUIT	0011198
-ENCLOSURES:	
- TOP	0011035
- BOTTOM	0009771
- FRONT	0010064
- BACK	0010366
MS-A:	
-CIRCUIT	0005545
-ENCLOSURES:	
- TOP	0005197
- BOTTOM	0005198
- FRONT	0005835
- BACK	0005199
-PUMP	0005652

SPARE PARTS	
JT-2A / JT-1A / JT-9A:	
-ENCLOSURES:	
- TOP	0011035
- BOTTOM	0009772
- FRONT	0004621
- BACK	0010366
-FRONT CIRCUIT	0006442
JT-2A:	
-TOP CIRCUIT	0010922
-SUCTION PUMP	0008938
-HOT AIR PUMP	0010651
JT-1A / JT-9A:	
-TOP CIRCUIT	0010930
-SUCTION PUMP	0008940
-HOT AIR PUMP	0011544

DD-2B 230V FUSE T-3A
 DD-1B 120V FUSE T-4A
 DD-9B 100V FUSE T-4A

JT-2A 230V FUSE T-3A
 JT-1A 120V FUSE T-3A
 JT-9A 100V FUSE T-3A

