




**RMSE-1C 120V**  
**RMSE-2C 230V**  
**RMSE-9C 100V**  
**COMPLETE REWORK STATION**  
**WITH ELECTRIC PUMP**

SPARE PARTS	
<b>DDE-1B / DDE-2B / DDE-9B:</b>	
-REAR CIRCUIT	0016746
-ENCLOSURE	
TOP	0011035
BOTTOM	0014567
FRONT+DISPLAY	0016312
BACK	0013413
<b>MSE-A:</b>	
-CIRCUIT	0014058
-ENCLOSURE	
TOP	0015266
BOTTOM	0014010
FRONT	0014688
BACK	0015261
-PUMP	0005652

DDE-1B 120V FUSE T-4A  
 DDE-2B 230V FUSE T-2A  
 DDE-9B 100V FUSE T-5A

SPARE PARTS	
<b>JTE-1D / JTE-2D / JTE-9D:</b>	
-ENCLOSURE	
TOP	0011035
BOTTOM	0014882
FRONT	0010064
BACK	0014982
<b>JTE-2D:</b>	
-CIRCUIT	0016428
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970
<b>JTE-1D / JTE-9D:</b>	
-CIRCUIT	0016430
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970

JTE-1D 120V FUSE T-8A  
 JTE-2D 230V FUSE T-4A  
 JTE-9D 100V FUSE T-8A

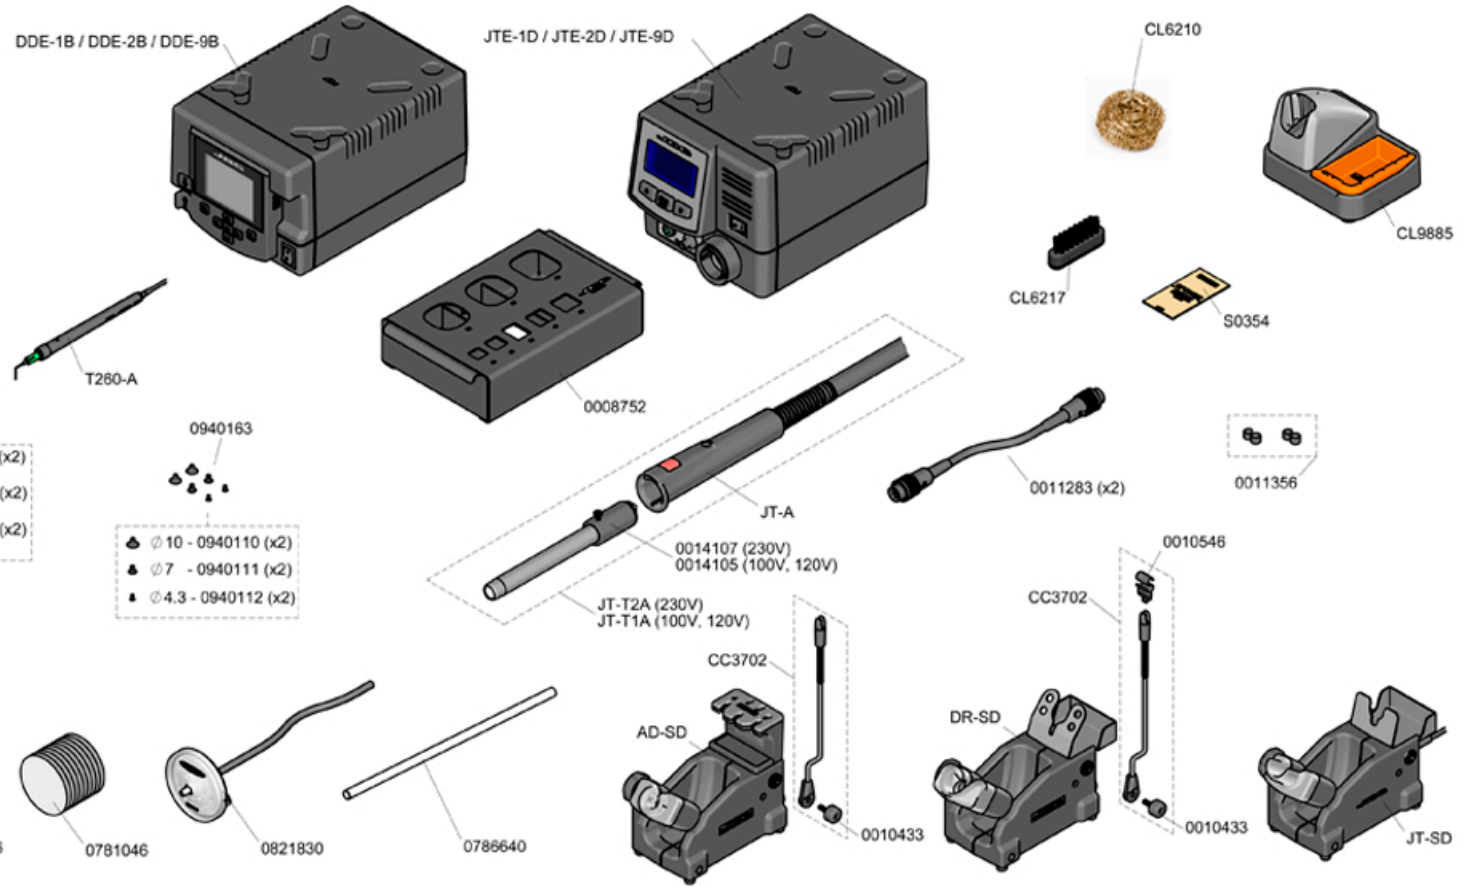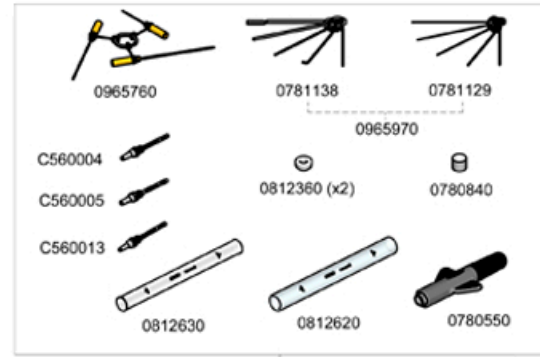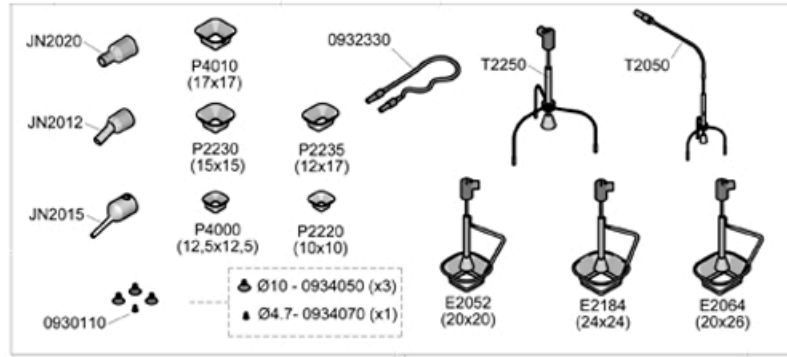

- 0901546
- Ø 0,85 - 0901538 (x2)
- Ø 0,55 - 0901520 (x2)
- Ø 0,4 - 0901512 (x2)
- 0861660
- Ø 1,2 - 0861580 (x2)
- Ø 0,9 - 0861560 (x2)
- Ø 0,8 - 0861540 (x2)

- 0940110 (x2)
- Ø 7 - 0940111 (x2)
- Ø 4.3 - 0940112 (x2)

- 0014107 (230V)
- 0014105 (100V, 120V)
- JT-T2A (230V)
- JT-T1A (100V, 120V)

0010546