

RMST-2A 230V
RMST-1A 120V
RMST-9A 100V

REWORK STATION

FROM SERIE 149165

| SPARE PARTS | |
|-------------------------------|---------|
| DD-2B / DD-1B / DD-9B: | |
| -CIRCUIT | 0011198 |
| -ENCLOSURES: | |
| - TOP | 0011035 |
| - BOTTOM | 0009771 |
| - FRONT | 0010084 |
| - BACK | 0010368 |

| MS-A: | |
|--------------|---------|
| -CIRCUIT | 0005545 |
| -ENCLOSURES: | |
| - TOP | 0008197 |
| - BOTTOM | 0008198 |
| - FRONT | 0008035 |
| - BACK | 0008199 |
| -PUMP | 0005652 |

| SPARE PARTS | |
|-------------------------------|---------|
| JT-2A / JT-1A / JT-9A: | |
| -ENCLOSURES: | |
| - TOP | 0011035 |
| - BOTTOM | 0009772 |
| - FRONT | 0004821 |
| - BACK | 0010368 |
| -FRONT CIRCUIT | 0008442 |

| JT-2A: | |
|---------------|---------|
| -TOP CIRCUIT | 0010922 |
| -SUCTION PUMP | 0008938 |
| -HOT AIR PUMP | 0010766 |

| JT-1A / JT-9A: | |
|----------------|---------|
| -TOP CIRCUIT | 0010930 |
| -SUCTION PUMP | 0008940 |
| -HOT AIR PUMP | 0011500 |

DD-2B 230V FUSE T-3A
 DD-1B 120V FUSE T-4A
 DD-9B 100V FUSE T-9A

JT-2A 230V FUSE T-9A
 JT-1A 120V FUSE T-9A
 JT-9A 100V FUSE T-9A

