


**JT-1D** 120V  
**JT-2D** 230V  
**JT-9D** 100V  
 HOT AIR STATION

SPARE PARTS	
<b>JTE-1D / JTE-2D / JTE-9D:</b>	
-ENCLOSURES:	
·TOP	0011035
·BOTTOM	0014882
·FRONT	0010064
·BACK	0014982
<b>JTE-1D / JTE-9D:</b>	
-CIRCUIT	0016430
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970
<b>JTE-2D:</b>	
-CIRCUIT	0016428
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTE-1D 120V FUSE T-8A  
 JTE-2D 230V FUSE T-4A  
 JTE-9D 100V FUSE T-8A

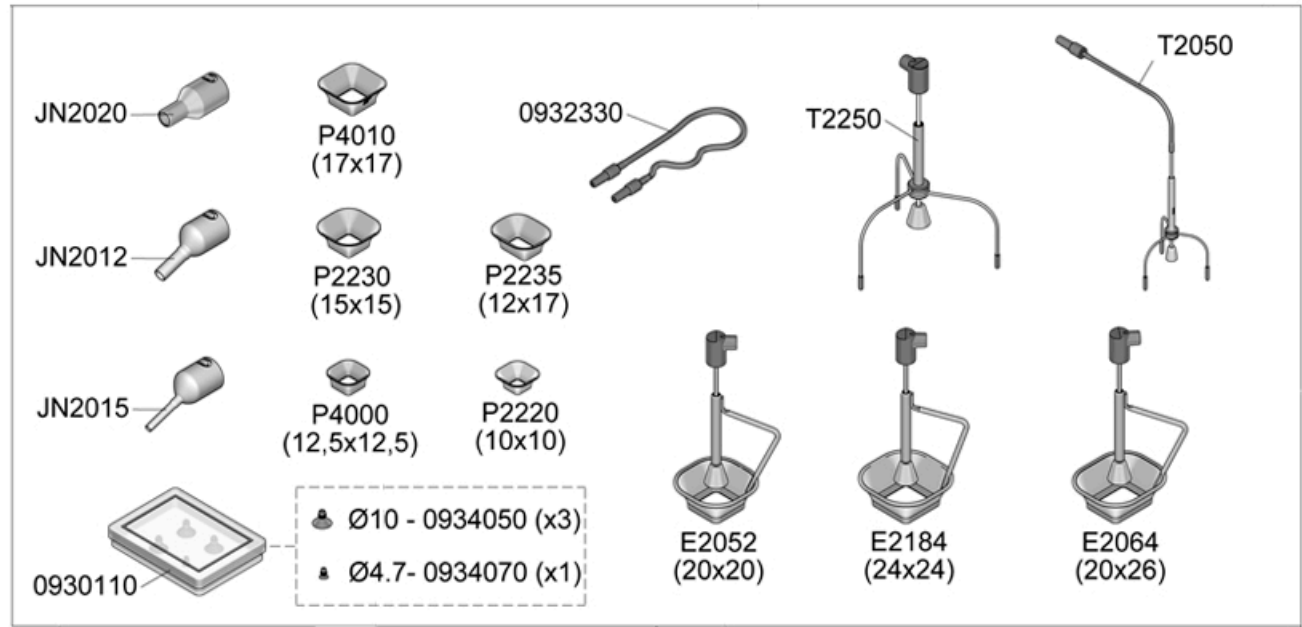

0012332

JTE-1D / JTE-2D / JTE-9D

