

**RMSE-1D 120V**  
**RMSE-2D 230V**  
**RMSE-9D 100V**  
**COMPLETE REWORK STATION**  
**WITH ELECTRIC PUMP**  
 From serie 188608

**SPARE PARTS**

**DDE-1B / DDE-2B / DDE-9B:**

-REAR CIRCUIT	0018129
-ENCLOSURE	
· TOP	0019028
· BOTTOM	0014567
· FRONT+DISPLAY	0016312
· BACK	0013413

**MSE-A:**

-CIRCUIT	0018453
-ENCLOSURE	
· TOP	0015266
· BOTTOM	0014010
· FRONT	0014688
· BACK	0015261
-PUMP	0005652

DDE-1B 120V FUSE T-4A  
 DDE-2B 230V FUSE T-2A  
 DDE-9B 100V FUSE T-5A

**SPARE PARTS**

**JTSE-1A / JTSE-2A**

-ENCLOSURES:	
· TOP	0019028
· BOTTOM	0013486
· FRONT	0016862
· BACK	0016812

**JTSE-1A**

-CIRCUIT	0017185
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970

**JTSE-2A**

-CIRCUIT	0019303
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTSE-1A 100/120V FUSE T-8A  
 JTSE-2A 230V FUSE T-4A

