

JBC

www.jbctools.com



JT

HIGH-POWER
HOT AIR STATION

JT / HIGH-POWER HOT-AIR

CONTROL UNIT



JT-SA STAND



JT-T2A (230V) or JT-T1A (100V-120V) HEATING SET



0008748 EXTRACTOR STAND *

Extractor
E2184
E2084
E2068
E2064
E2052



Protector
P2220 (32)
P2230 (48)
P2235 (24)
P4000 (44)
P4010 (60)

T2050 \varnothing 20 T2250 \varnothing 40 TRIPOD*



0932015 \varnothing 4 0932012 \varnothing 6 0932020 \varnothing 8 NOZZLE



0932330 SUCTION TUBE *



0930110 SUCTION CUPS *




CORD




*These accessories not supplied with JT-2QA / JT-1QA / JT-9QA stations

INSTALLATION

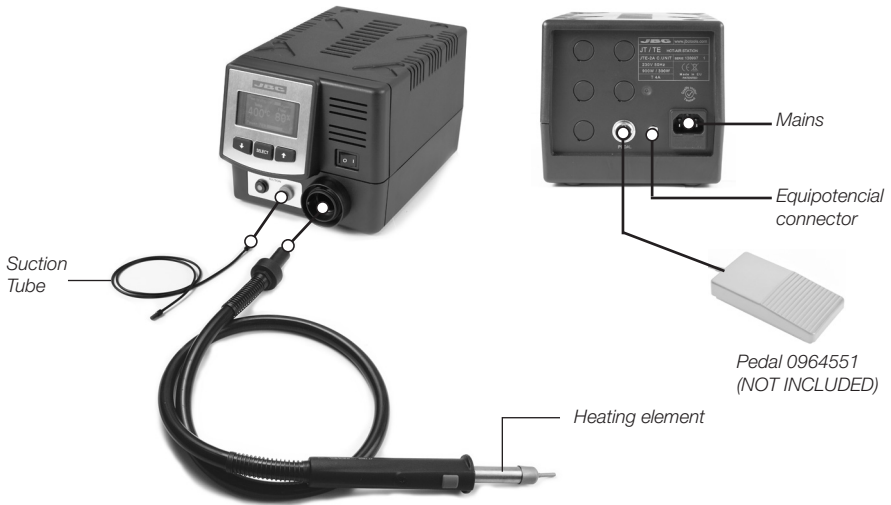


Connectable tools:
JT-T2A / JT-T1A
TE-TA

DESCRIPTION

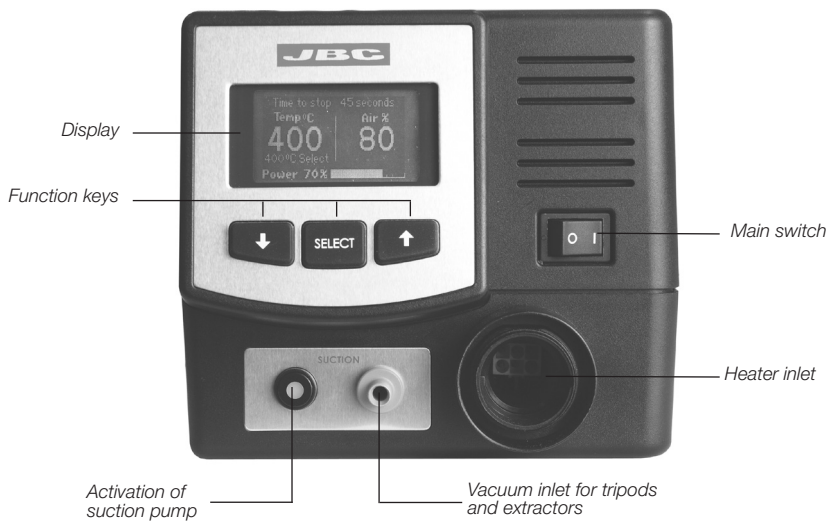


WORKING

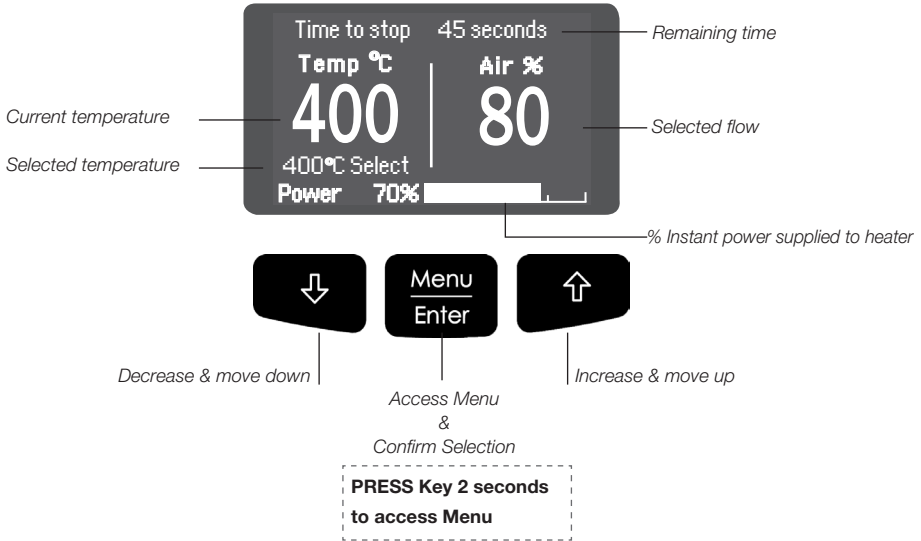


SETTINGS

ORIGINAL PIN: 0105

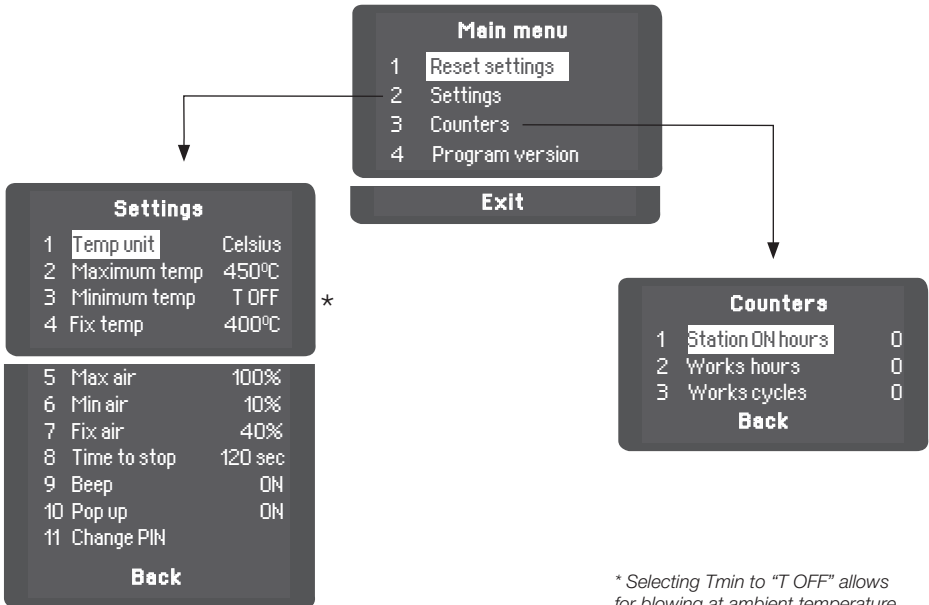


* Selecting Tmin to "T OFF" allows for blowing at ambient temperature.


DESOLDERING PROCEDURE

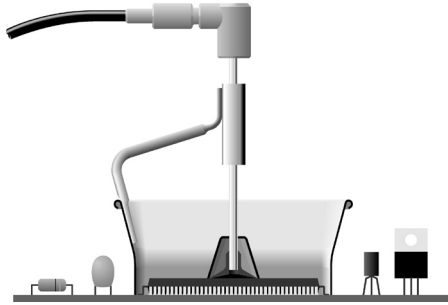

1. Position suction cup.

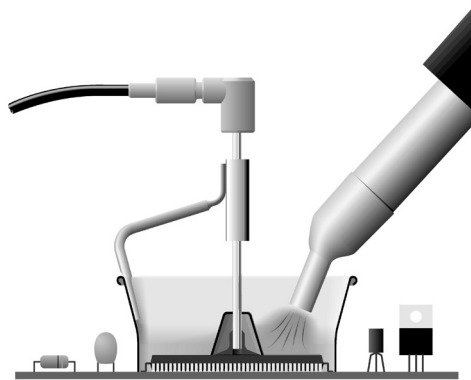

2. Hot-air melts solder.

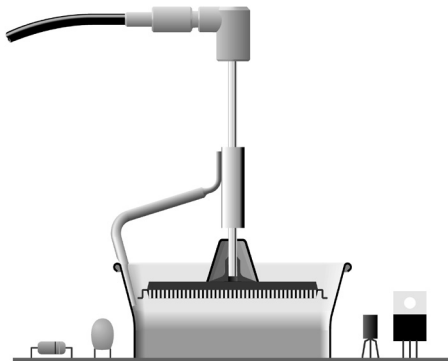


3. IC pops up automatically.

MAINTENANCE

REPLACING THE HEATING ELEMENT

Only perform this operation when element is cold and unit is disconnected from mains.

1. Untighten screw.
2. Pull element forward off handpiece.
3. Connect new heating element, ensuring its seated all the way in.
4. Replace screw.

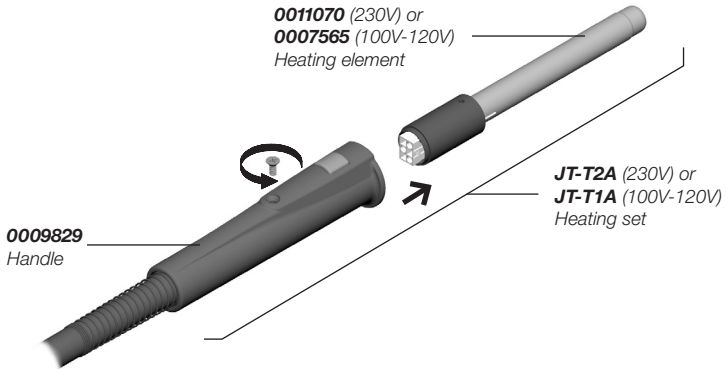

CHANGING THE HEATING SET

1. Ensure that the tool is off.
2. Use a wrench to unscrew the connector seal.



3. Pull back the seal.
4. Pull connector from socket to disconnect heating set.
5. Follow steps in reverse to connect the heating set.

TECHNICAL SPECIFICATIONS

- Temperature selection from 150 to 450°C and cool mode (can be used to blow air at room temperature).
- Power: 1000W.
- Air flow regulation: 6-45 l/min.
- **JT-2A** 230V control unit. Input: 230V 50/60Hz.
- **JT-1A** 120V control unit. Input: 120V 50/60Hz.
- **JT-9A** 100V control unit. Input: 100V 50/60Hz.
- Total weight of unit: 2.5Kg.
- Complies with CE standards on electrical safety, electromagnetic compatibility and ESD protected housing "skin effect".
- RoHS compliant.
- Equipotential connector and the tool tip are connected to station mains ground supply for ESD protection.



This product should not be
thrown in the garbage.

JBC

WARRANTY

JBC's 2 years warranty guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.

SERIAL N°

STAMP OF DEALER

DATE OF PURCHASE

www.jbctools.com