



JTSE

Power Hot Air Station without Magazine

This Plug & Play Guide corresponds to the following references:

Ref.

JTSE-9QB (100 V)
JTSE-1QB (120 V)
JTSE-2QB (230 V)

Station

More Information at the
product web page



Video Guide

Watch the
product video.



Packing List

The following items are included according purchased station reference:



JTSE
Hot Air Control Unit 1 unit
Ref. JTSE-9UA (100 V)
Ref. JTSE-1UA (120 V)
Ref. JTSE-2UA (230 V)



JTS
Stand 1 unit
Ref. JT-SF



JTT
Heater Hose Set 1 unit
Ref. JT-T1A (100V / 120V)
Ref. JT-T2A (230V)



JN2015
JTT Bent Nozzle Ø 4 mm - 18 ° 1 unit
Ref. JN2015



JN2012
JTT Bent Nozzle Ø 6 mm - 18 ° 1 unit
Ref. JN2012



JN2020
JTT Straight Nozzle Ø 8 mm 1 unit
Ref. JN2020




PH217
Kapton Tape 1 unit
Ref. PH217



PH218
Thermocouple Type K1 unit
Ref. PH218

Installation

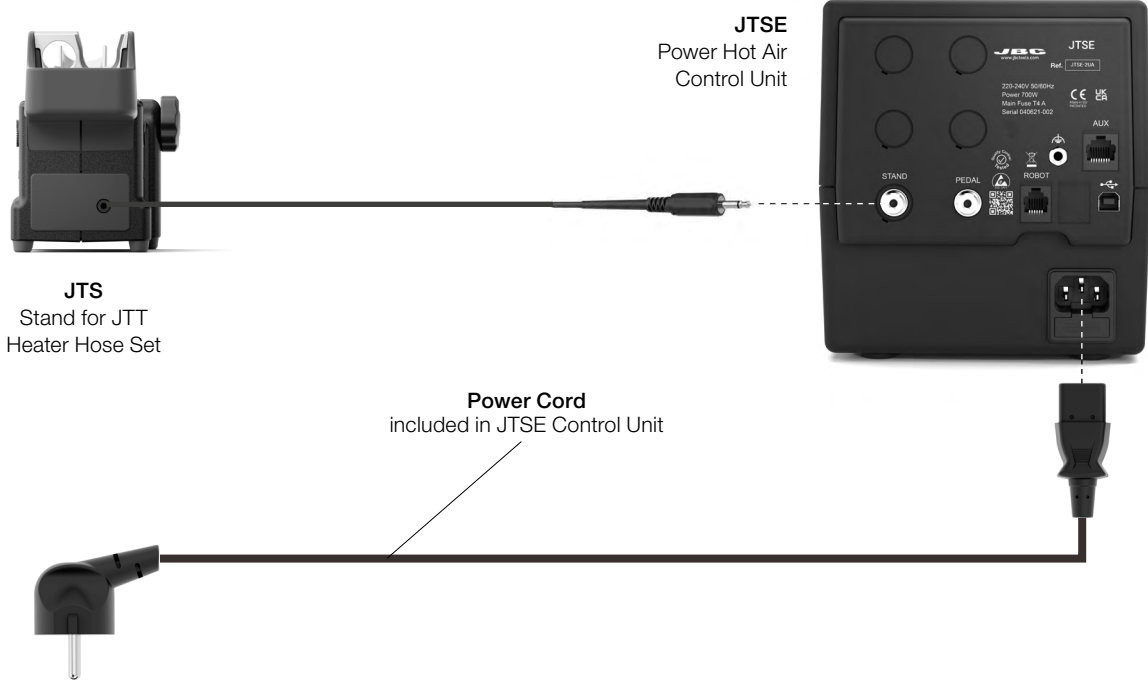

Specifications

JTSE

Power Hot Air Station without Magazine

Ref. **JTSE-9QB** (100 V) 50/60Hz. Input fuse: 8A. Rated current: 7A

Ref. **JTSE-1QB** (120 V) 50/60Hz. Input fuse: 8A. Rated current: 7A

Ref. **JTSE-2QB** (230 V) 50/60Hz. Input fuse: 4A. Rated current: 3A

- Package Dimensions / Weight: 444 x 395 x 273 mm / 6.28 kg
(L x H x W) 17.5 x 15.6 x 10.7 in / 13.85 lb

Complies with CE standards.

ESD safe.