

JTSE Control Unit
 Hot Air Control Unit
 Ref.: **JTSE-9UA** 100V
JTSE-1UA 120V
JTSE-2UA 230V

Control Unit



SPARE PARTS	
JTSE CONTROL UNIT:	
-ENCLOSURES:	
·TOP	0019028
·BOTTOM	0013486
·FRONT	0026199
·BACK	0021065
FOR REF. JTSE-9UA/JTSE-1UA:	
-CIRCUIT	0024361
-SUCTION PUMP	0026338
-HOT AIR PUMP	0018769
FOR REF. JTSE-2UA:	
-CIRCUIT	0024360
-SUCTION PUMP	0026337
-HOT AIR PUMP	0018769

Ref.: JTSE-9UA 100V	FUSE T-8A
JTSE-1UA 120V	FUSE T-8A
JTSE-2UA 230V	FUSE T-4A