

## Adjustable Rework Arm (w/o Base)

### RWT-B

This Rework Arm comes **without a base plate** and it is easy **installable onto the workbench**. Therefore, the operator takes full advantage of the workbench surface.

The Rework Arm RWS **supports the Hot Air Heater** allowing **hands-free operation**. Due to an included adapter piece the Rework Arm suits for JT- and TE-Heaters Hose Set's.

The Rework Arm comes with different articulations which are allowing **height adjustment** and **work position adjustment** to suit the operator's needs.

The Tool Holder allows **inclination and rotation adjustment**. Both **vertical axis** and **Tool Holder articulation** are **scaled**, which is helpful in repetitive soldering tasks.

The Hose Clamp holds the Heater Hose away from the work area to keep it clear of obstacles.

PCB Support and Heater Hose Set are not included.




### Specifications

Net weight	2,79 kg (6.16lb)
Size	386,5 x 444,5 x 85 (15.20 x 17.48 x 3.35 in)
Package weight	3,92 kg (8.64lb)
Package dimensions	595 x 520 x 180 mm (23.43 x 20.47 x 7.09 in)

### Connectables

#### PreHeater

Convection Preheater Set  
PHB-KA

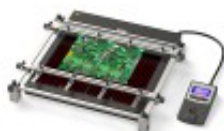

## Connectables

Precision Hot Air Station  
TESE



Precision Hot Air station without  
extractor desk  
TESE-Q



Hot Air Station  
JTSE



Hot Air station without extractor  
desk  
JTSE-Q



## Documentation

Manuals

[RWT-B Manual](#)

Exploded View

[RWT-B Exploded View](#)