

RMSE

Complete Rework Station

Ref.: **RMSE-9QF** 100V
RMSE-1QF 120V
RMSE-2QF 230V

SPARE PARTS	
DDE CONTROL UNIT:	
-REAR CIRCUIT	0028012
-ENCLOSURE	
· TOP	0019028
· BOTTOM	0014567
· FRONT+DISPLAY	0031187
· BACK	0021064
MSE-B:	
- CIRCUIT	0033215
- ENCLOSURE	
· TOP	0032092
· BOTTOM	0032089
· FRONT	0032096
· BACK	0032091
- PUMP	0031985
- AC ADAPTER	0028084

Ref.: **DDE-9C** 100V FUSE T-5A
DDE-1C 120V FUSE T-4A
DDE-2C 230V FUSE T-2A

SPARE PARTS	
JTSE CONTROL UNIT:	
-ENCLOSURES:	
· TOP	0019028
· BOTTOM	0013486
· FRONT	0026199
· BACK	0021065
FOR REF. JTSE-9UA/JTSE-1UA:	
-CIRCUIT	0024361
-SUCTION PUMP	0026338
-HOT AIR PUMP	0018769
FOR REF. JTSE-2UA:	
-CIRCUIT	0024360
-SUCTION PUMP	0026337
-HOT AIR PUMP	0018769

Ref.: **JTSE-9A** 100V FUSE T-8A
JTSE-1A 120V FUSE T-8A
JTSE-2A 230V FUSE T-4A

