

www.jbctools.com INSTRUCTION MANUAL



JTT Heater Hose Set

This manual corresponds to the following references: JT-T1A (100V/120V) JT-T2A (230V)

Packing List

The following items are included:



Handle for JTT ... 1 unit Ref. JT-A

Manual 1 unit Ref. 0029044



JTH Heating Element for JTT 1 unit according to purchased reference included either JTH1 Ref. 0014105 (100V/120V) or JTH2 Ref. 0014107 (230V)

Changing JTT Heater Hose Set

Note: Only perform this operation when the station is turned off.

Use a spanner to unscrew the nut (1) and remove the tool hose (2).

Insert the new hose, make sure it is pushed all the way into the connector (2), and tighten the nut (1).





Features

JTT Heater Hose Set allows to repair medium and large SMDs. It works with JTSE Control Unit and JN Nozzles.

Replacing the Heating Element



Note: Only perform this operation when the heating element is cold and the unit is disconnected from the mains.

Loosen the screw (1) and pull the worn heating element out of the handle (2).

Insert the new heating element, make sure it is pushed all the way in (2) and tighten the screw (1).

* not included, sold separately

Specifications

JTT

Heater Hose Set

Ref.: JT-T1A (100V/120V) Ref.: JT-T2A (230V)

- Hose Length:
- Total Net Weight:

1100 mm / 43.31 in 370.5 g / 0.817 lb

- Package Dimensions/Weight: 382 x 159 x 81 mm / 508.8 g (L x W x H) 15.04 x 6.26 x 3.19 in / 1.122 lb

Complies with CE standards. ESD safe.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



0029044-160323