

Packing List



**Sealing Plug
for B.NANO Tool** 1 set

Each set contains 10 plugs



Manual 1 unit
Ref. 0032718

OB5000 sealing plugs work exclusively with B.NANO tools. They prevent undesirable flux vapors or particles from entering the tool.

⚠ For B.NANO tools, the use of the sealing plug is mandatory. Without the use of the sealing plug, the cartridges cannot be properly inserted.

JBC

www.jbctools.com

INSTRUCTION MANUAL



OB5000

**Sealing Plug
for B.NANO Tool**

0032718-271025




www.jbctools.com



Replacing the Sealing Plug


Important: Check the condition of the plug periodically and replace it as soon as wear or cracking is detected.

Removing Sealing Plug

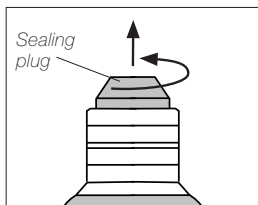


Remove the worn sealing plug by unscrewing it by hand.

Mounting Position

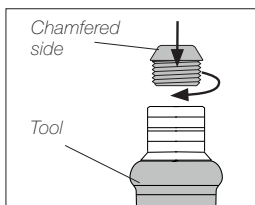

Position the chamfered side upwards and screw the new sealing plug into the tool bushing until it stops.

Inserting Sealing Plug

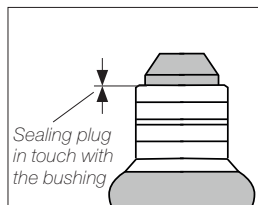

Make sure the sealing plug is placed correctly. The shoulder of the plug must be in touch with the bushing.