

INSTRUCTION MANUAL



Premium Rework station with Electric Pump

Ref. DDSE-B

Packing List

The following items should be included:

DDE Control Unit 1 unit Ref. DDE-1B (120V) DDE-2B (230V) DDE-9B (100V)

Electric Desoldering Module 1 unit Ref. MSE-A

ESD Tip Cleaner 1 unit Ref. CL8499







Handle 1 unit Ref. T245-A

General Purpose



Stand 1 unit

Desolderina Iron 1 unit Ref. DR560-A



Sponge 1 unit Ref. S0354



Metal Brush 1 unit Ref. CL6217

Ref. 0014874

Brass Wool 1 unit Ref. CL6210





Module Cable 1 unit



Stand Cable 2 units

Ref. 0011283



Power cord 1 unit Ref. 0010569 (230V) 0013671 (100/120V)





Check our website for the corresponding manuals. Also available in other languages.



DR560 Accessories

Ref. 0010211

Long Tip Cleaning set 1 unit Tip cleaning set 1 unit Ref. 0965970 Ref. 0965760 Tips 3 units Glass solder Spanner 1 unit collector 1 unit Ref. C560005 (x1) Ref. 0780550 C560013 (x1) Ref. 0812620 C560004 (x1) mount our fill CONTRACTOR OF THE PERSON NAMED IN Filter Box 1 unit Metal solder Internal gasket 1 unit Ref. 0780840 Ref. 0019208 collector 1 unit It contains 10 filters It contains 2 gaskets Ref. 0812630





Cleaning stick1 unit Ref. 0786640

Union Flanges 1 unit Ref. 0011356

8

Cotton
Filter1 unit
Ref. 0781046
It contains 10 filters



Suction Filter 1 unit Ref. 0821830



Cartridge holder 1 unit Ref. 0021083




Manual1 unit Ref. 0020487




Features

Work simultaneously with **up to 2 tools** and join each station port with **1 module** + 1 pedal (Peripherals).

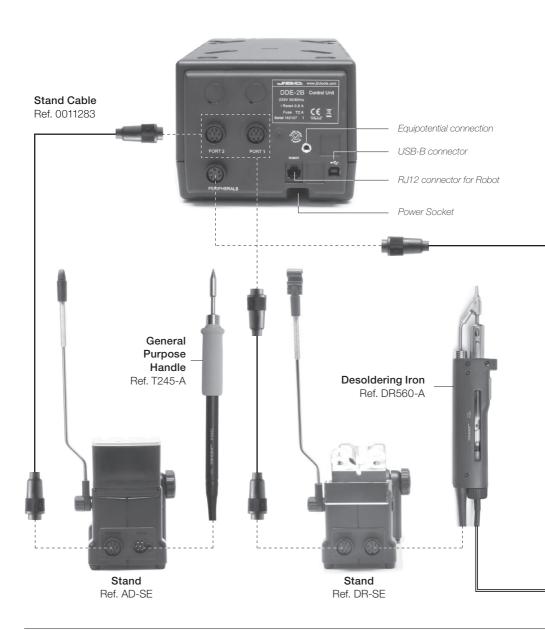





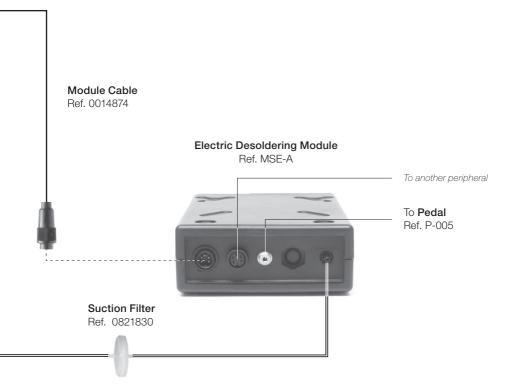

DDE-B Compatibility

Basic working system				Peripherals**			
Control Unit	Stand	Tool	Cartridge Range	MSE-A / MVE-A	MNE-A	FSE-A	P-005
DDE-B	AD-SE	T210-A	C210				•
		T245-A	C245			•	•
		T470-A	C245			•	•
	DN-SE	T210-NA*	C210				
		T245-NA*	C245				
		T470-NA*					
	AP-SE	AP250-A	C250				
	PA-SE	PA120-A	C120				
	HT-SE	HT420-A	C420			•	•
	DS-SE	DS360-A	C360	•			•
	DR-SE	DR560-A	C560	•			•

^{*} The MNE Nitrogen Flow Regulator is required.

MSE-A Compatibility

Module	Stand	Tool	Cartridge Range	Contro	Peripherals	
				DDE	DME	P-005
MSE-A	DS-SE	DS360-A	C360	•	•	•
	DR-SE	DR560-A	C560	•	•	•

^{**}If you need to connect the MS, MV, MN or FS modules, an adapter is required (Ref. IM2496).



Maintenance

Before carrying out maintenance or storage, always allow the equipment to cool.

- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool status.
- Maintain tip surface clean and tinned prior to storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.



Clean periodically



- Replace a blown fuse as follows:



1. Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.



- 2. Press the new fuse into the fuse holder and replace it in the station.
- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflamable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protective glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.



有害物质含量表

产品中有害物质的名称及含量

部件名称	有害物质								
APIT 110V	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)			
烙铁头	0	0	0	0	0	0			
手柄	0	0	0	0	0	0			
电源线	0	0	0	0	0	0			
主机	0	0	0	0	0	0			
电源插座	0	0	0	0	0	0			
保险丝	0	0	0	0	0	0			
主开关	0	0	0	0	0	0			
电位连接	X	0	0	0	0	0			
变压器	0	0	0	0	0	0			
线路板	Х	0	0	0	0	0			

O 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

X 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

Specifications

Premium Rework Station with Electric Pump

 ${\tt DDSE-1B\,/\,DDSE-2B\,/\,DDSE-9B}$

- Total weight: 9,25 kg (20.4 lb)

DDE-1B 120V 50/60Hz. Input fuse: 4A. Output: 23.5V DDE-2B 230V 50/60Hz. Input fuse: 2A. Output: 23.5V DDE-9B 100V 50/60Hz. Input fuse: 5A. Output: 23.5V - Net Weight: 3,815 kg (8.41 lb)

- Dimensions: 148 x 120 x 232 mm (5.83 x 4.72 x 9.13 in)

- Output Peak Power: 150W per tool

- Temperature Range: 90 - 450 °C (190 - 840 °F)

- Idle Temp. Stability (still air): ± 1.5 °C (± 3 °F) - Tip to ground resistance: <2 ohms - Tip to ground voltage: <2mV RMS

- Ambient Operating Temperature: 10 - 40 °C (50 - 104 °F)

- Communicatio connectors: USB-A / USB-B / Peripherals connectors

- Robot connector: RJ12 for RS-232 protocol

MSE-A

- Net Weight: 0,7 kg (1.54 lb)

- Dimensions: 145 x 55 x 225 mm (5.71 x 2.17 x 8.86 in)

- Air Pressure supply range: 4-6 Bar

- Vacuum at 6 Bar: 90% / 680 mmHg / 26.8 inHg

- Flow rate: 15 SLPM

- Ambient operating temp.: 10 - 40 °C (50 - 104 °F)

- Pedal connection

Complies with CE standards.

ESD protected.



Exploded View CL6166 0780550 0780840 0010433 0010546 0965970 CC3702 0812620 0781138 0019208 SCH-A 0010211 0 0812630 0010433 0965760 CC3702 C560004 C560005 C560013 0786640 DDSE-28 230V FUSE T-2A DDSE-28 230V FUSE T-2A DDSE-38 100V FUSE T-5A 0019028 0014567 0016312 0013413 0015266 0014010 0014688 0015261 0005652 0018129 0018453 DDE-18 / DDE-28 / DDE-9B: SPARE PARTS BOTTOM FRONT+DISPLAY BACK CL6217 0011283 (x2) -REAR CIRCUIT -ENCLOSURE - TOP - BOTTOM - FRONT - BACK -CIRCUIT -ENCLOSURE MSE-A: -PUMP 0781046 C245908 C245903 DR560-A 0016057 REWORK STATION WITH ELECTRIC PUMP DDE-18 / DDE-28 / DDE-98 **DDSE-1B** 120V **DDSE-2B** 230V **DDSE-9B** 100V FROM SERIE 201745 0014874



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Please register your product warranty within 30 days of purchase in: www.jbctools.com/productregistration.



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website