



www.jbctools.com

## INSTRUCTION MANUAL


	Page
English	2
Español	4


# Update File

Control Units with TFT screen

# Update the control unit software

1. Download the **JBC Update File** from [www.jbctools.com/software.html](http://www.jbctools.com/software.html) which contains the latest update package. Save it on a USB flash drive, preferably one with no other files.

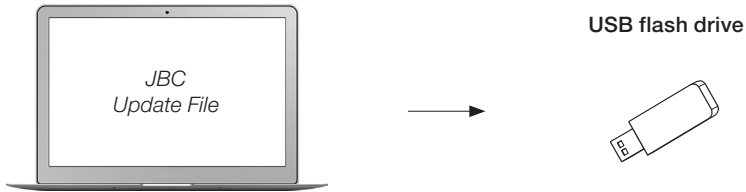


2. Connect the **USB flash drive** which contains the latest update package and the notification  will be displayed automatically.

**DME**

**DDE / HDE / JTSE / TESE**

**NAE / PHSE / PHBE**


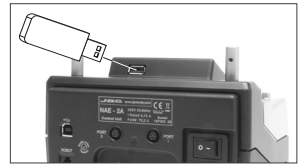



*If the DME station does not detect the USB flash drive, please use a Flash Drive Partitioning software.*

3. Install the **JBC Update File** according to the following:

**DME**

**DDE / HDE / NAE / JTSE / TESE / PHSE / PHBE**

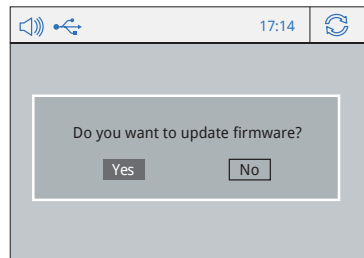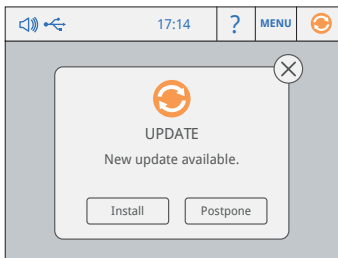


Press **Install** on the pop-up.  
If not displayed click on the  notification.

Press **INFO** on the keyboard and confirm the pop-up to begin the updating process.


4. During the updating process do not turn off the control unit, it may turn on and off automatically. The installation finishes when the updating bar is completed and the working screen is displayed.

**DME**

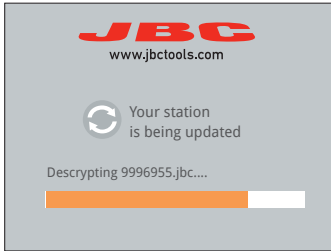

The work screen will be displayed after confirming the “Welcome” pop-up.

**DDE / HDE / NAE / JTSE / TESE / PHSE / PHBE**

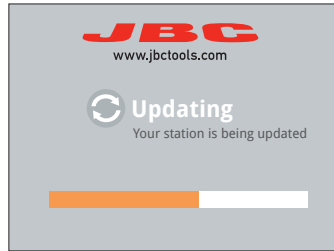


If the process stops for a long time (over 30 min), reset the station and wait until the installation is fully completed.

5. Check that the update has been installed successfully by means of the main **Menu**.

**DME**



Info

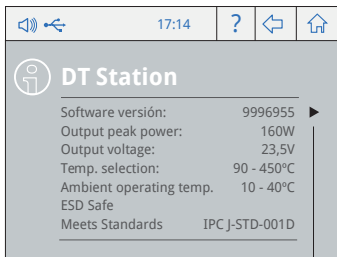


Press ► to check the firmware version

**DDE / HDE / NAE / JTSE / TESE / PHSE / PHBE**




Station

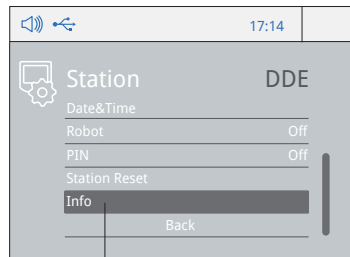


Confirm to check the software version and the firmware.

# Actualice el software de la unidad de control

1. Descargue el **JBC Update File** (archivo de actualización) en [www.jbctools.com/software.html](http://www.jbctools.com/software.html) y guárdelo en un pendrive que no contenga otros archivos preferiblemente.

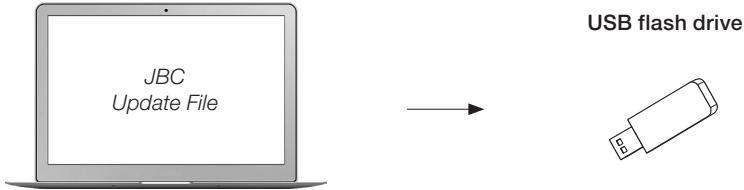


2. Conecte el **pendrive** a la unidad de control y automáticamente aparecerá la notificación 

DME

DDE / HDE / JTSE / TESE

NAE / PHSE / PHBE


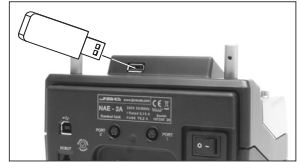



Si la unidad de control DME no detectara el pendrive, necesitará un software de partición de unidades USB.

3. Instale el **JBC Update File** (archivo de actualización) según lo siguiente:

DME

DDE / HDE / NAE / JTSE / TESE / PHSE / PHBE

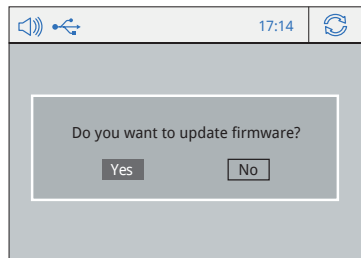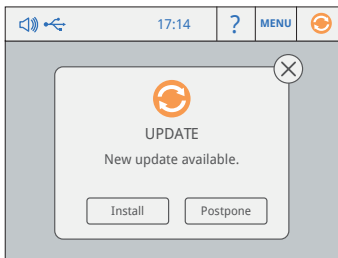


Pulse **Install** en el pop-up.  
Si no se muestra pulse la notificación 

Pulse **INFO** en el teclado y confirme el pop-up para comenzar el proceso de actualización.


4. Durante la actualización no apague la unidad de control. Puede que el equipo se reinicie automáticamente. La instalación no finalizará hasta que se muestre la pantalla de trabajo.

**DME**

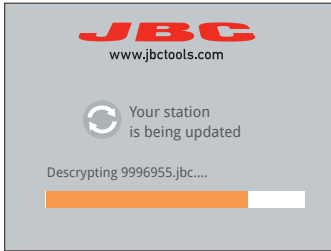

La pantalla de trabajo se mostrará tras confirmar el pop-up de "Welcome".

**DDE / HDE / NAE / JTSE / TESE /PHSE PHBE**

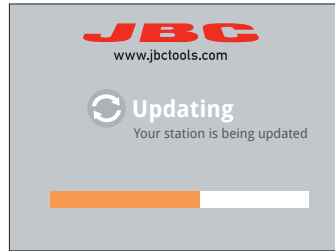


Si el proceso se detiene durante más de 30 minutos, reinicie el equipo y espere hasta que la instalación se complete del todo.

5. Compruebe que la actualización se ha instalado correctamente a través del **Menu** principal.

**DME**



Info

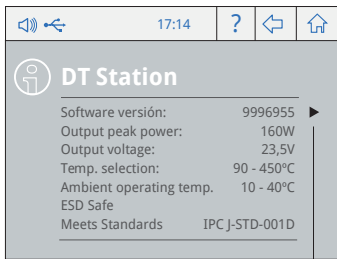


Pulse ► para comprobar la versión de los firmwares

**DDE / HDE / NAE / JTSE / TESE /PHSE / PHBE**



Station

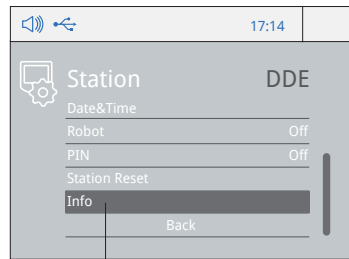

Confirme para comprobar la versión del software y los firmwares

