

Automatic Solder-Wire Feeder

Feed solder wire automatically from any position

SF Automatic Solder-Wire Feeder

This Solder-Wire Feeder allows you to feed solder wire automatically from any position.



Ref. - Voltage (AC) / Fuse

SF-110VB - 100-120 V / 0.2A

SF-210VB - 230 V / 0.1A



export graphics and monitor and manage

Max. Wire length	250 mm / 9.84 in	
Max. Forward speed	120 mm/s / 4.72 in/s	
Max. Reverse speed	120 mm/s / 4.72 in/s	
Ambient operating temp.	10 - 40 °C / 50 - 104 °F	
Communication connectors	USB-B, Peripherals	
Robot connector	RJ12 for RS-232 connection	

Guide Kits

You can change the guide kit depending on the solder wire used.

References without solder-wire perforation

Ref.	Solder wire Ø		
GSF04D	0.38 - 0.40 mm / 0.015 - 0.016 in		
GSF05D	0.46 - 0.56 mm / 0.018 - 0.022 in		
GSF06D	0.60 - 0.64 mm / 0.023 - 0.025 in		
GSF07D	0.70 - 0.78 mm / 0.028 - 0.031 in		
GSF08D	0.80 - 0.82 mm / 0.032 - 0.033 in		
GSF10D	0.90 - 1.10 mm / 0.036 - 0.044 in		
GSF12D	1.14 - 1.27 mm / 0.045 - 0.051 in		
GSF15D	1.50 - 1.57 mm / 0.060 - 0.063 in		
GSF16D	1.60 - 1.63 mm / 0.063 - 0.065 in		
GSF18D	1.80 mm / 0.073 in		

References with solder-wire perforation

Ref.	Solder wire Ø	Ref.	Solder wire Ø
GSF08V	0.80 mm / 0.032 in	GSF15V	1.50 mm / 0.059 in
GSF10V	1.00 mm / 0.040 in	GSF16V	1.60 mm / 0.063 in
GSF12V	1.20 mm / 0.047 in	GSF18V	1.80 mm / 0.073 in



Stand

SFS Stand works exclusively with SF280 Automatic Solder-Wire Handle.

Tool Holder position is easily adjustable to suit your needs and **Cable Collector** is designed for perfect movement adaptation and to keep cables away from the working area.









www.jbctools.com