



**JT**  
 Hot Air Station  
 Ref.: **JTSE-1B** 120V  
**JTSE-2B** 230V

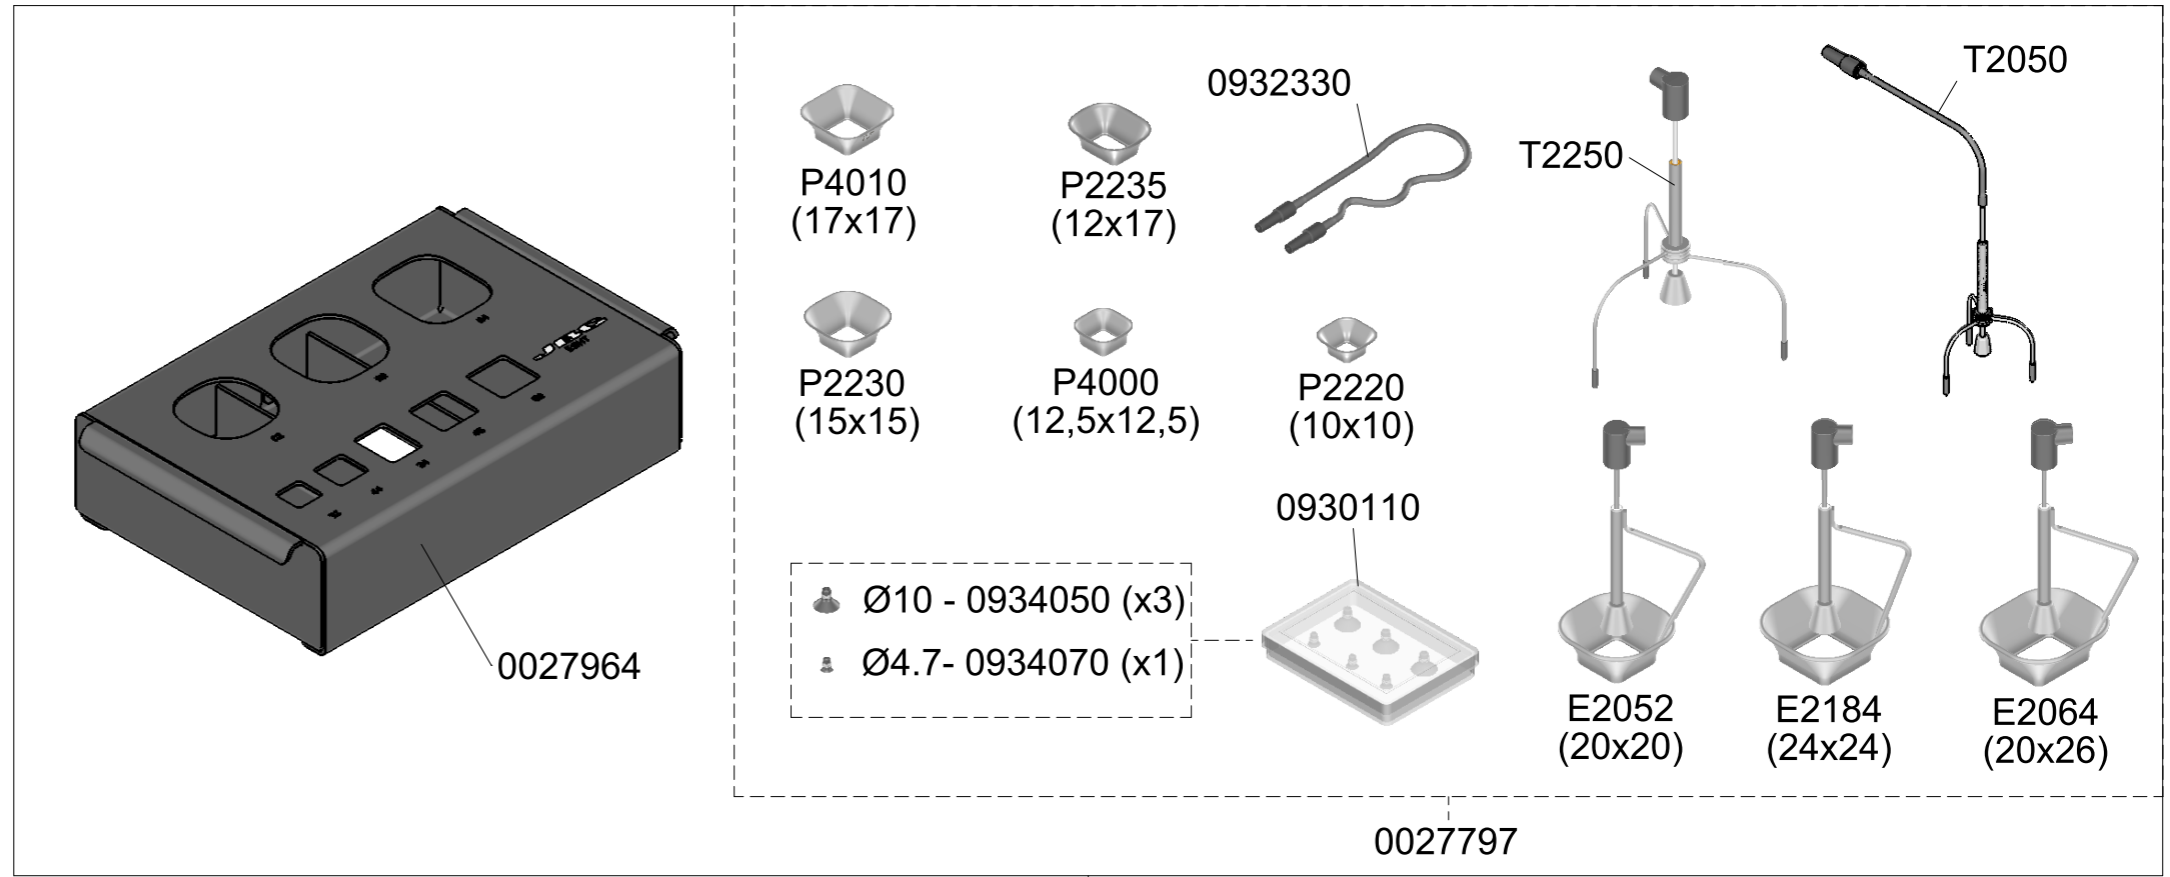

SPARE PARTS	
<b>JTU CONTROL UNIT:</b>	
<b>-ENCLOSURES:</b>	
·TOP	0019028
·BOTTOM	0026196
·FRONT	0026199
·BACK	0026195
<b>FOR REF. JTSE-1UA:</b>	
-CIRCUIT	0024361
-SUCTION PUMP	0026338
-HOT AIR PUMP	0018769
<b>FOR REF. JTSE-2UA:</b>	
-CIRCUIT	0024360
-SUCTION PUMP	0026337
-HOT AIR PUMP	0018769

Ref.: **JTSE-1UA** 100/120V FUSE T-8A  
**JTSE-2UA** 230V FUSE T-4A

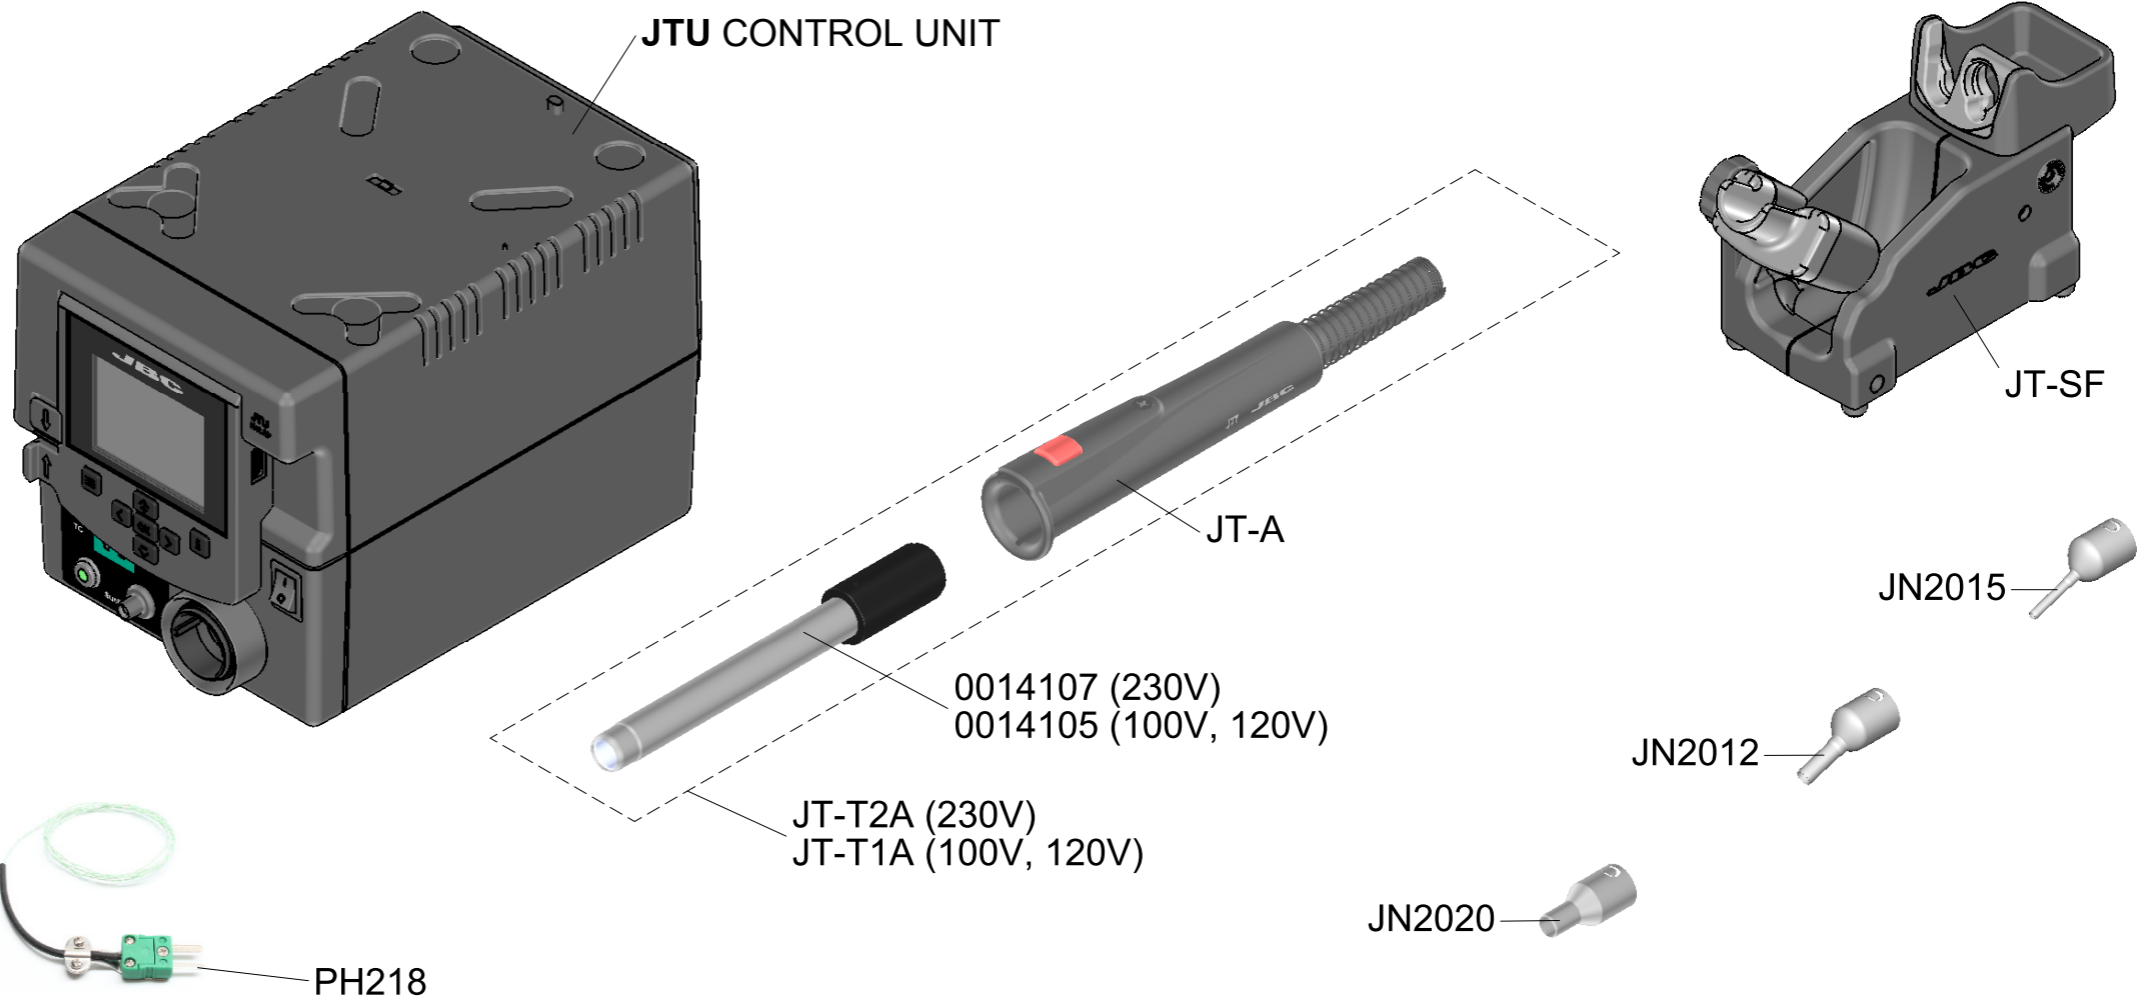

ESHT