

RMS Complete Rework Station



Ref.: **RMSE-9QF** 100V
RMSE-1QF 120V
RMSE-2QF 230V

SPARE PARTS	
DDU CONTROL UNIT:	
-REAR CIRCUIT	0028012
-ENCLOSURE	
· TOP	0019028
· BOTTOM	0026182
· FRONT+DISPLAY	0022317
· BACK	0026324
MSE ELECTRIC DESOLDERING MODULE:	
-MODULE	0018453
-CIRCUIT	
· TOP	0015266
· BOTTOM	0022642
· FRONT	0014688
· BACK	0015261
-PUMP	0005652

Ref.: **DDE-9C** 100V FUSE T-5A
DDE-1C 120V FUSE T-4A
DDE-2C 230V FUSE T-2A

SPARE PARTS	
JTU CONTROL UNIT:	
-ENCLOSURES:	
· TOP	0019028
· BOTTOM	0026196
· FRONT	0026199
· BACK	0026195
FOR REF. JTSE-1A:	
-CIRCUIT	0024361
-SUCTION PUMP	0026338
-HOT AIR PUMP	0018769
FOR REF. JTSE-2A:	
-CIRCUIT	0024360
-SUCTION PUMP	0026337
-HOT AIR PUMP	0018769

Ref.: **JTSE-1A** 100/120V FUSE T-8A
JTSE-2A 230V FUSE T-4A

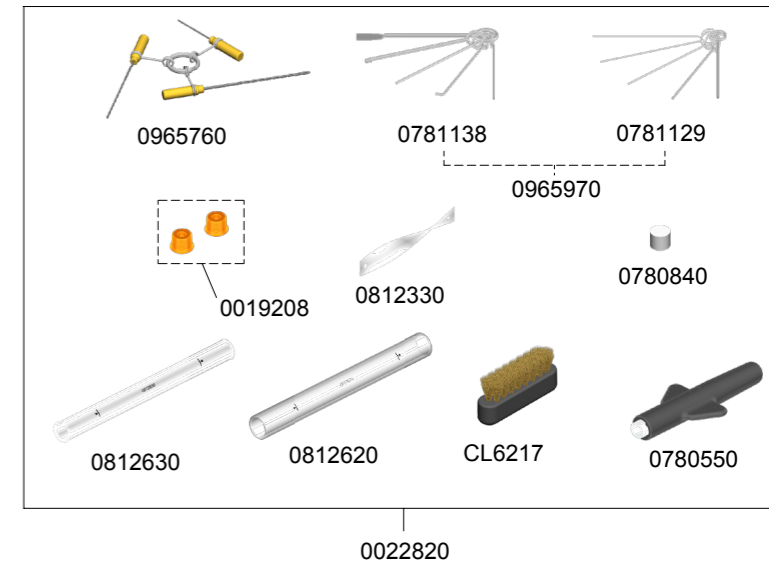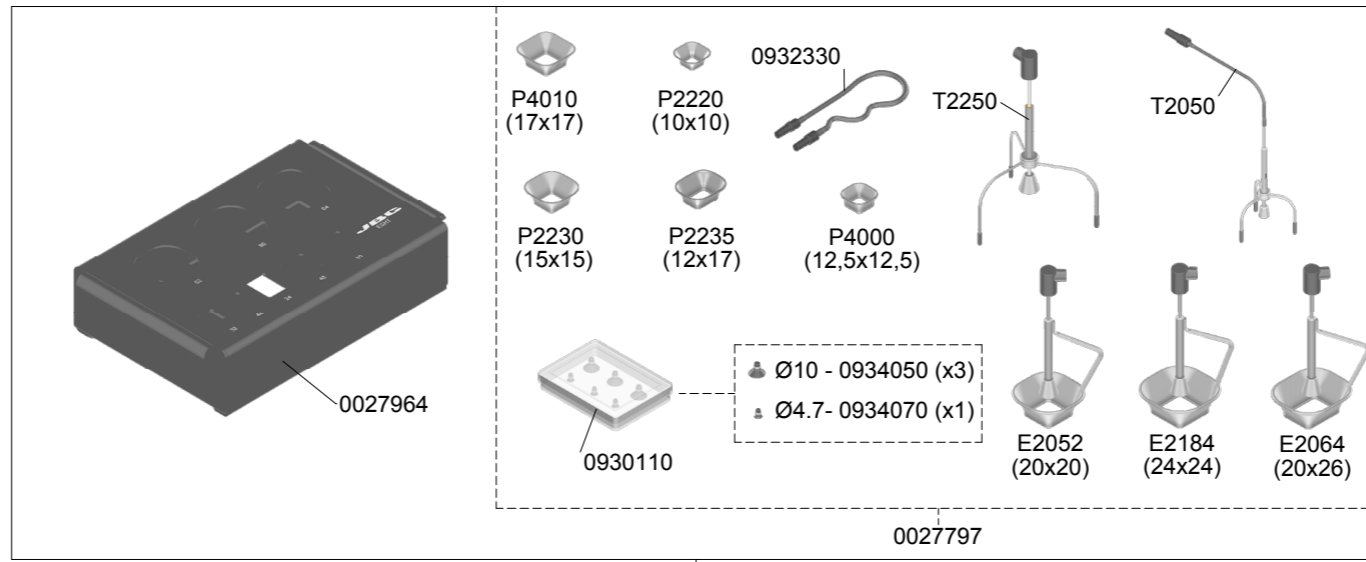

ESHT

