



JTSE

Power Hot Air Station

This Plug & Play Guide corresponds to the following references:

Ref.

JTSE-9B (100 V)
JTSE-1B (120 V)
JTSE-2B (230 V)

Station

More Information at the
product web page



Video Guide

Watch the
product video.



Packing List

The following items are included according purchased station reference:



JTSE
Hot Air Control Unit 1 unit
 Ref. JTSE-9UA (100 V)
 Ref. JTSE-1UA (120 V)
 Ref. JTSE-2UA (230 V)



JTS
Stand 1 unit
 Ref. JT-SF



JTT
Heater Hose Set 1 unit
 Ref. JT-T1A (100V / 120V)
 Ref. JT-T2A (230V)



JN2015
JTT Bent Nozzle Ø 4 mm - 18° 1 unit
 Ref. JN2015



JN2012
JTT Bent Nozzle Ø 6 mm - 18° 1 unit
 Ref. JN2012



JN2020
JTT Straight Nozzle Ø 8 mm 1 unit
 Ref. JN2020



PH217
Kapton Tape 1 unit
 Ref. PH217




PH218
Thermocouple Type K1 unit
 Ref. PH218



ESHT
Magazine for Protectors & Extractors 1 unit
 Ref. ESHT-A

Installation

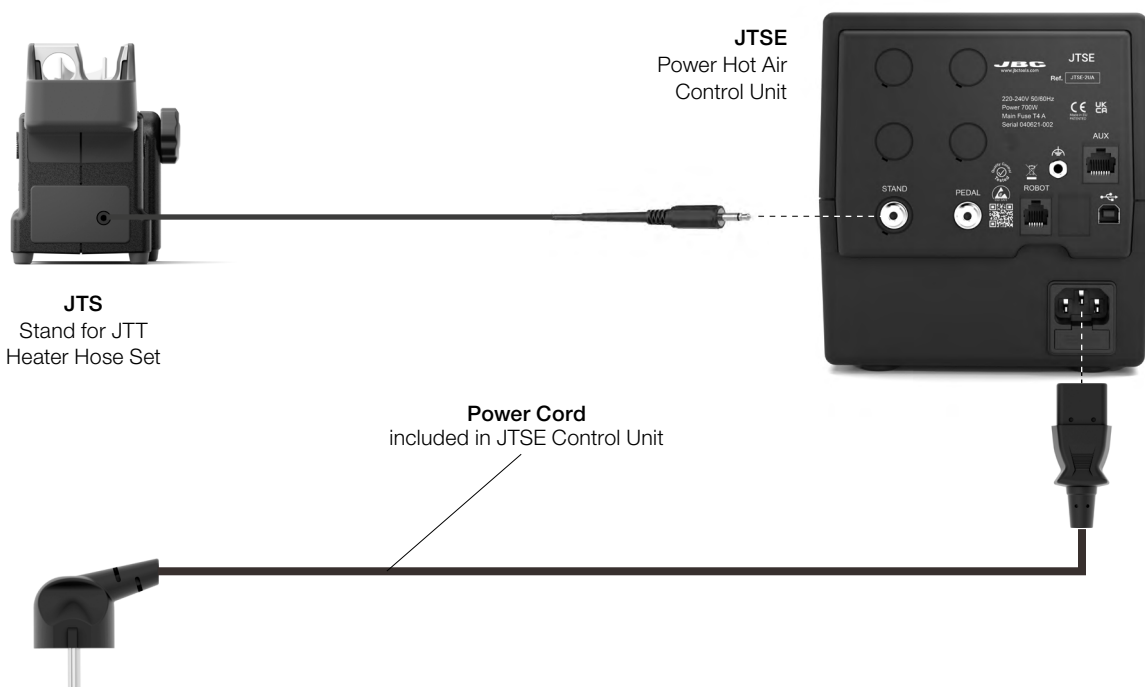

Installation


JTSE
Power Hot Air
Control Unit

JTT
Heater Hose Set

PH218
Thermocouple Type K



Nozzle for JTT

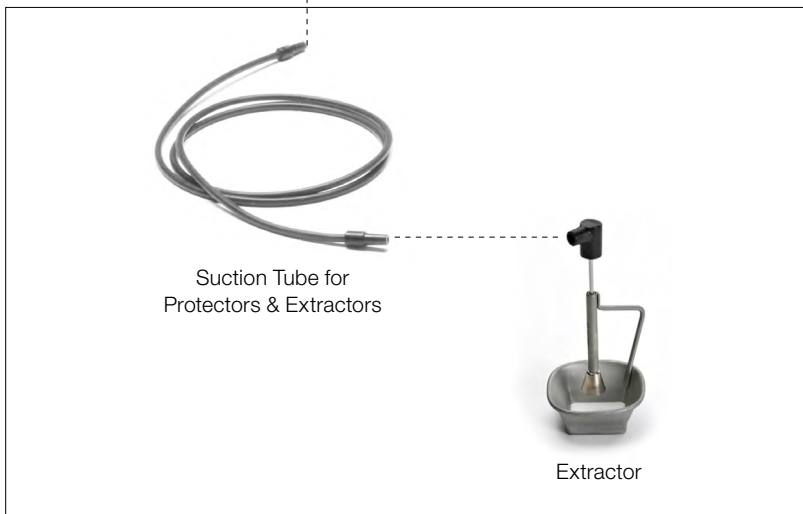

Suction Tube for
Protectors & Extractors

Extractor

included in
ESHT
Magazine for Protectors & Extractors



Specifications

JTSE

Power Hot Air Station

Ref. **JTSE-9B** (100 V) 50/60Hz. Input fuse: 8A. Rated current: 7A

Ref. **JTSE-1B** (120 V) 50/60Hz. Input fuse: 8A. Rated current: 7A

Ref. **JTSE-2B** (230 V) 50/60Hz. Input fuse: 4A. Rated current: 3A

- Package Dimensions / Weight: 545 x 345 x 275 mm / 7.89 kg
(L x H x W) 21.5 x 16.6 x 10.8 in / 17.39 lb

Complies with CE standards.

ESD safe.