

# AL

## SOLDERING IRON

**Reference Guide**


# AL / SOLDERING IRON

## CONTENTS


AL-A  
SOLDERING IRON




MANUAL

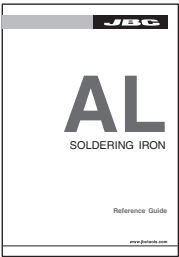

## INSTALLATION

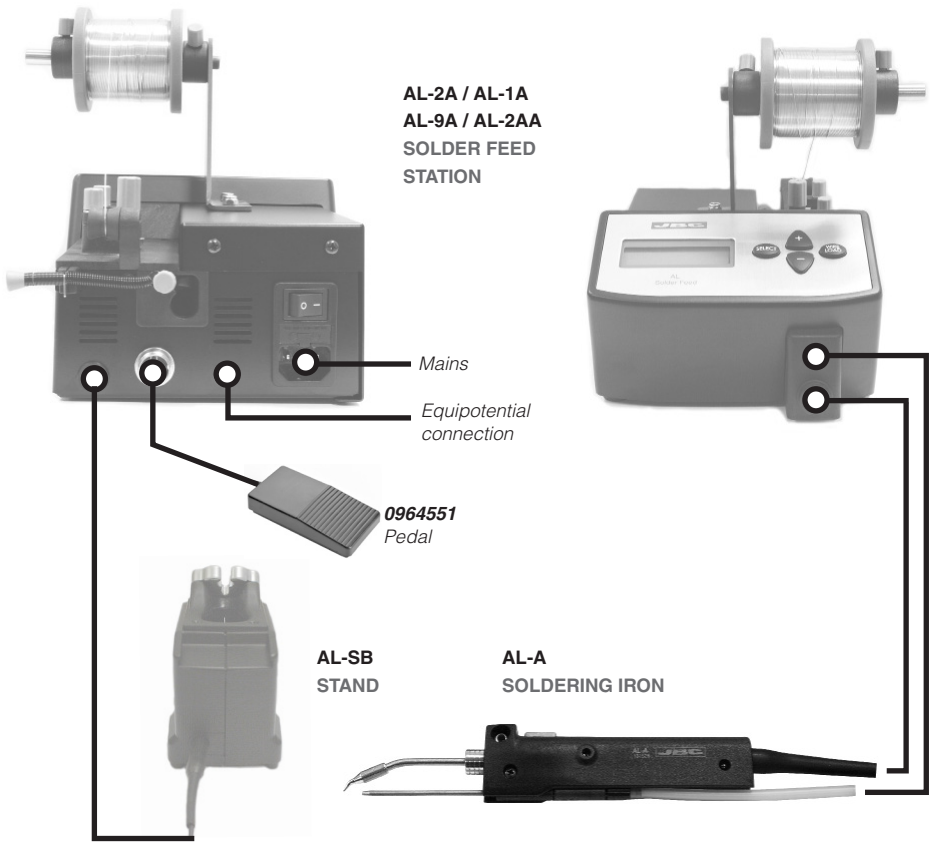

## CHANGING THE HANDPIECE'S CARTRIDGE

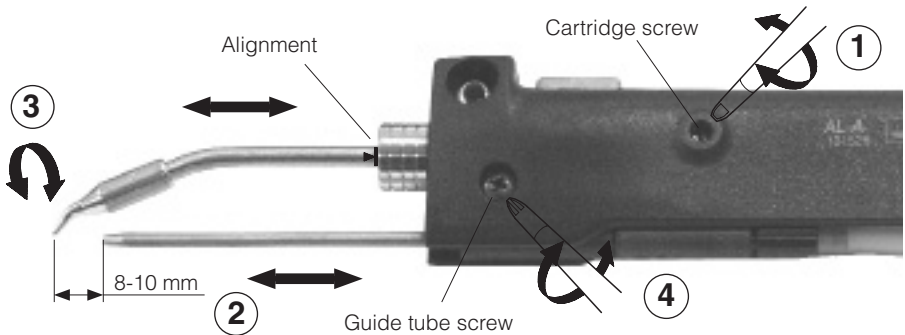


- Loosen the cartridge screw (1) to release the cartridge.
- Place the cartridge in the solder feed handle.

**Important:** It is essential to insert the cartridge till the end for a good connection. Use the mark ▶ as reference.

- Align the tip of the cartridge with the solder guide tube (3). Tighten the cartridge screw (1).
- You must leave a gap of 8-10 mm between cartridge tip and the end of the guide tube (2). Loosen the guide screw (4). Adjust the guide tube and tighten screw (4).

**WARNING:** It is essential to tighten this screw for the tool to function.

## C250 CARTRIDGE RANGE

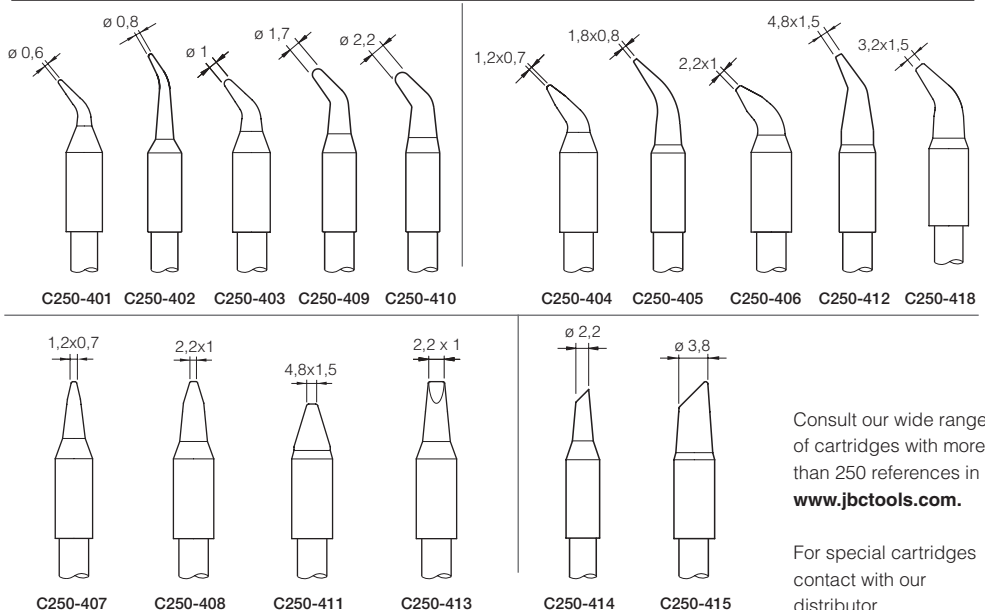

Consult our wide range of cartridges with more than 250 references in [www.jbctools.com](http://www.jbctools.com).

For special cartridges contact with our distributor.

ACCESSORIES

AL-1A  
HANDS-FREE SOLDERING ARM  
AND FUME EXTRACTOR



F4468  
FUME EXTRACTOR



WARRANTY

The JBC 2 years warranty, guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this, fully filled in, sheet.

SERIAL N°

STAMP OF DEALER

DATE OF PURCHASE



This product should not be  
thrown in the garbage.

MORE INFORMATION  
[www.jbctools.com](http://www.jbctools.com)