

JBC

www.jbctools.com

INSTRUCTION MANUAL



P305

Pedal Kit for Control Units

This manual corresponds to the following references:

P-305

Packing List

The following items are included:



Pedal1 unit

Adapter1 unit




Manual 1 unit

Ref. 0028918

Connection Example

Connect the tool stand and the pedal to the adapter. Then connect the adapter to the station port.

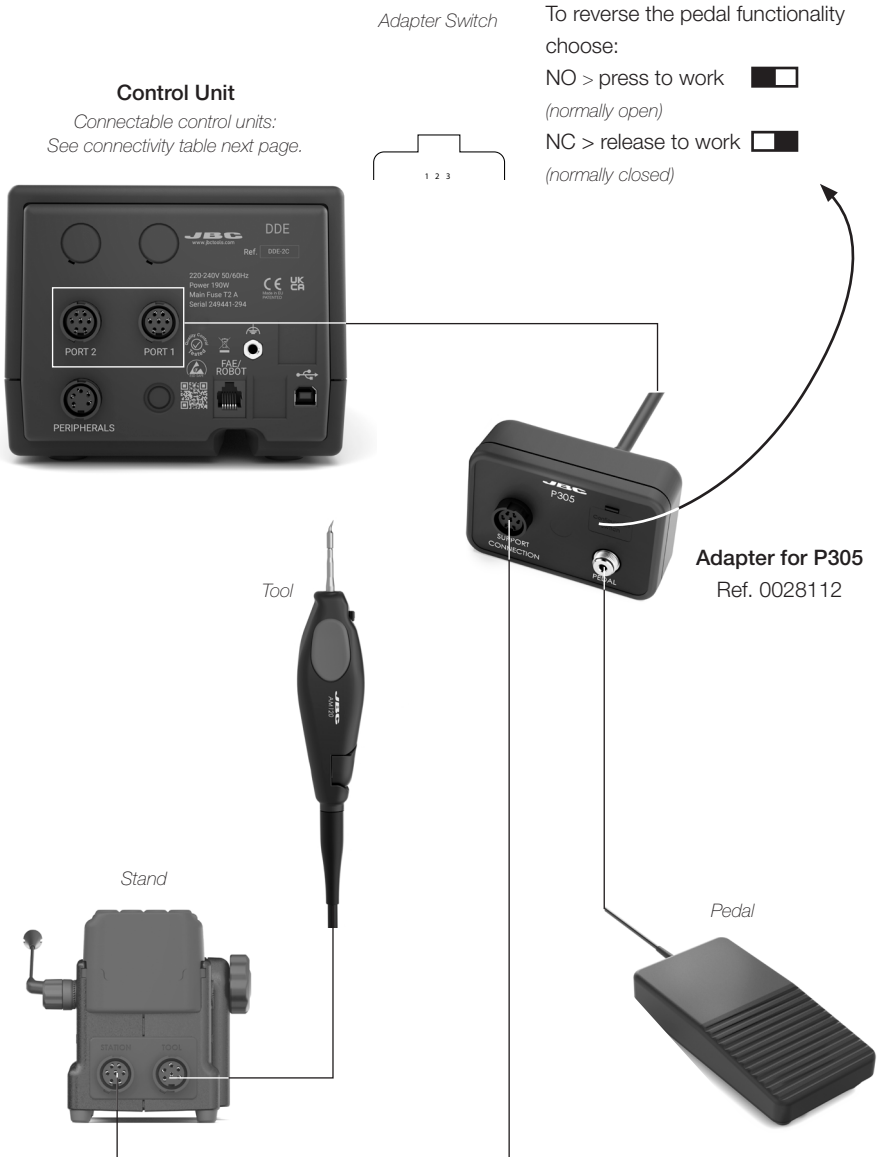

Pedal Compatibility

P305 is compatible with JBC devices as shown in the table in the highlighted column.

P405* and P005* is also shown in the table below.

Marked with ○ means pedal P405/P005 cannot be connected directly to JBCs control unit. A module (MSE, MVE, MNE) must be used (See next pages "Pedal Set Up").

		Pedals		
		P405*	P305	P005*
Control Unit	DI		●	
	DDE	○	●	○
	DME	○	●	○
	HDE	○	●	○
	JNASE	●		●
	JTSE	●		●
	WS		●	
	ALE	●		●
	NAE	●		●
Station	ALE			●
Module	MS/MSE	●		●
	MV/MVE	●		●
	MN/MNE	●		●
Preheater	PHNE	●		●
	PHSE	●		●
	PHBE	●		●
	PHXLE	●		●
Fume Extractor	FAE1	●		●
	FAE2	●		●

* not included, sold separately




Pedal Set Up for


- **DIU** (Control Unit)
- **WSU** (Wire Stripper Station)

In order for the tool not to heat up the component before the pedal is pressed, the station's Sleep Delay and Hibernation Delay function must be set to 0 min.

1. Enter the **Main Menu** and select **Tool Settings**

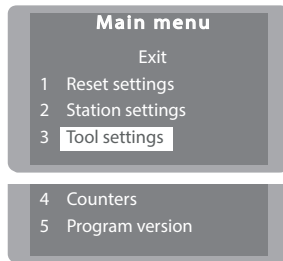

2. Change **Sleep Delay** and **Hibernation Delay** to **0 min**.

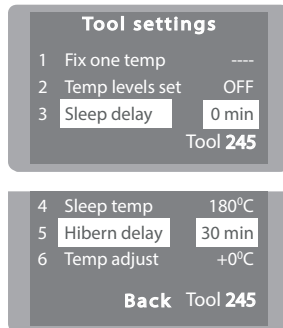





Pedal Set Up for: - DDU, HDU (Control Units)

Note: Peripheral modules - MSE, MVE or MNE - are needed to connect the pedal to DDU y HDU.

1. Enter the **Peripherals** Menu and **select the port** which you want to join to the pedal.

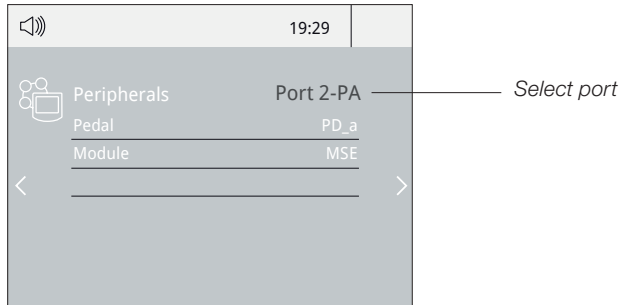


2. Select the pedal from the list.

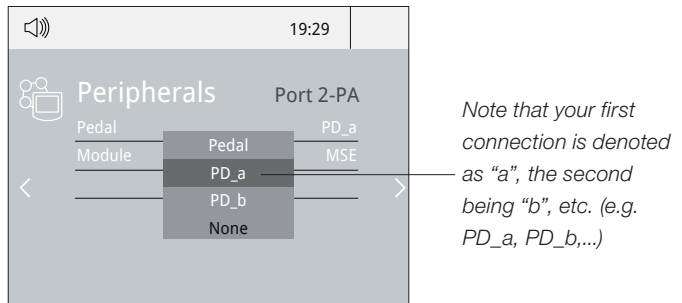

3. Set the pedal function according to your work needs:

Select how the pedal acts: as **Sleep**, **Extractor** (hibernation) or as a **module** switch.

Select the activating mode of the pedal (**pressed/released**)

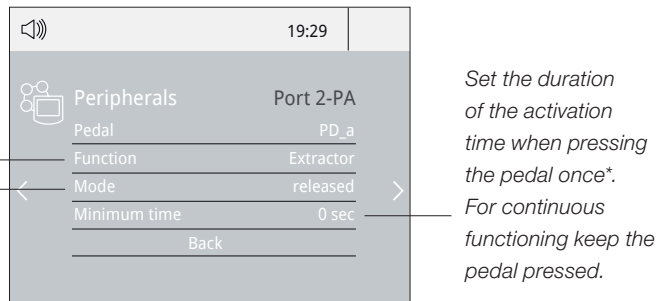


*NB: The same can be applied inversely by continually pressing the pedal and releasing to activate.



Pedal Set Up for DMU (Control Unit)


Note: Peripheral modules - MSE, MVE or MNE - are needed to connect the pedal to DMU. After connecting one of the mentioned modules to the station a popup window opens.

1. To configure the module MSE/MVE/MNE press Setup in the popup window.

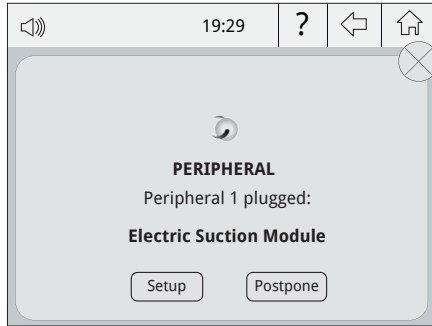

2. Select the module from the list of peripheral connections. Remember your first connection is denoted as "a", the second being "b", etc. (e.g. MS_a, MS_b,...). Do the same with the pedal (e.g. PD_a,...)

3. Select the port of the tool you want to link to the peripheral.

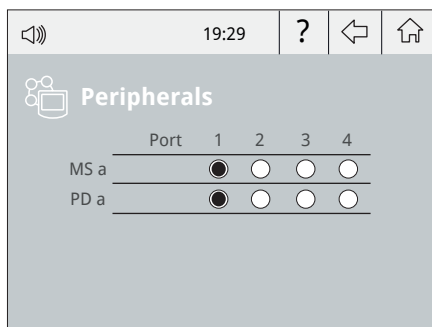

4. Press Menu or Back to save changes.


Once set up, the module settings can be changed by entering the **Peripherals** Menu .

Example: Chip Components Rework Process using Tweezers and Pedal

The Pedal is frequently used to rework components with tweezers.

AN115 JBCs adjustable nano tweezers are the most effective tool for desoldering chip components but also it facilitates its rapid placement and soldering by using P405 pedal connected to JBC's NAS station.

1

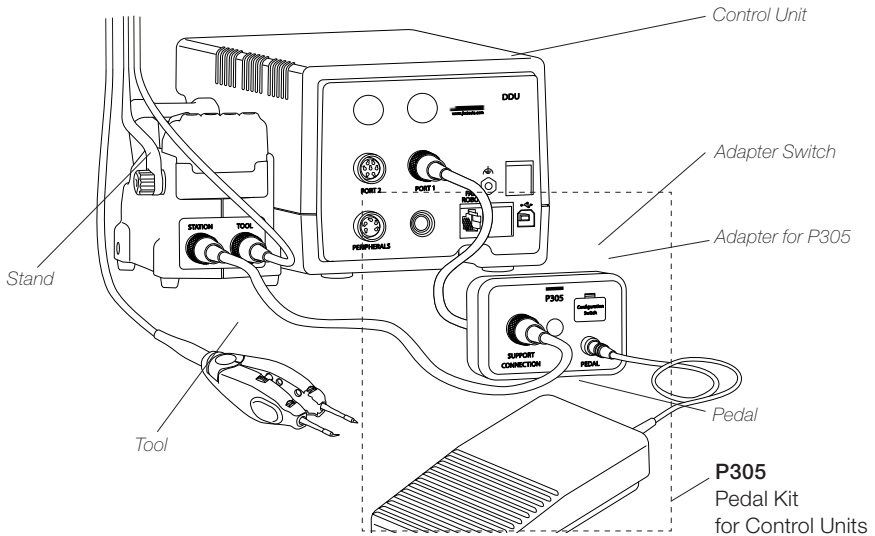


Connections

Connect pedal P305 to its adapter and then the adapter to the control unit port. The tool must be connected to its stand and the stand to the pedal adapter.



In the peripherals menu for the “Pedal Activation Mode” choose between “pressed” and “released”.

Note: If working with P305 and its adapter, choose the pedal functionality at the adapter switch like shown beside.

Adapter Switch

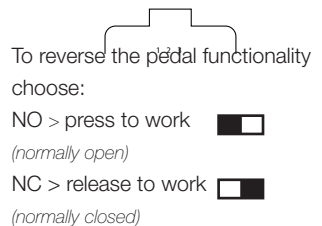

2

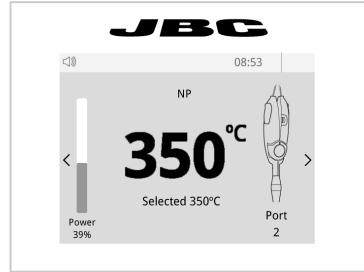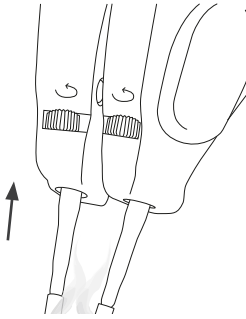


Desoldering*

Lift the tool from the holder, press and hold the pedal to activate the tool and desolder the component.

Once the pedal is released the tool enters hibernation mode and cools down.

* "Press Mode" previously selected

3

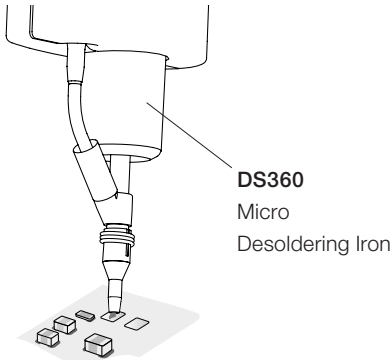


Pad Cleaning

Clean the pads with JBC's desoldering tool DS360.

For this operation JBC's desoldering station DSS is needed.

4


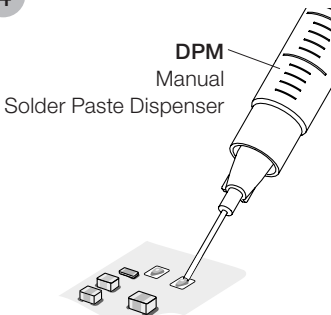


Solder Paste Dispensing

Apply the solder paste amount needed to solder the new chip component.

The use of JBC's DPM solder paste dispenser is recommended.

5

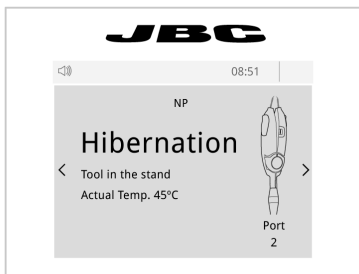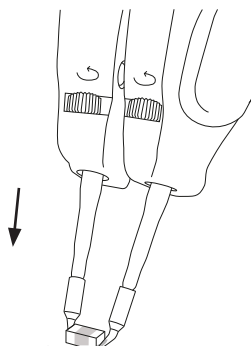



Placing

Do not press the pedal.

Use the tool to position the component on the previously tinned pad.

Note: The inactive tool prevents the component from heating up prematurely.

6

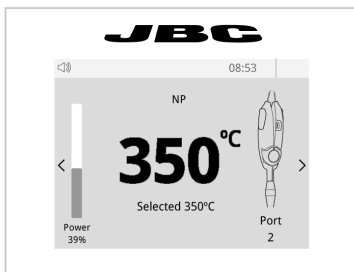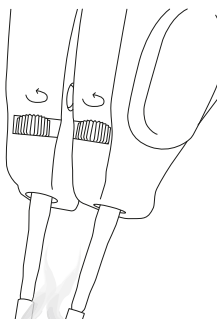

Soldering

Once in position press and hold the pedal to activate the tool and perform the soldering.

Specifications

P305

Pedal Kit for Control Units

Ref. P-305

- Pedal Cable Length: 1.9 m / 74.80 in
- Total Net Weight: 513 g / 1.13 lb

- Total Package Dimension / Weight: 342 x 155 x 120 mm / 783 g
(L x W x H) 13.46 x 6.10 x 4.72 in / 1.73 lb

Complies with CE standards
ESD safe

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com

0028918-291122