

JBC

www.jbctools.com

INSTRUCTION MANUAL



Fume Inlet Duct for Modular Stands


Ref. FAE050

Packing List

The following items should be included:

Fume Inlet Duct for Modular Stands 1 unit
Ref. FAE050


Manual 1 unit
Ref. 0019112

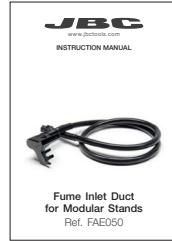

Connection



1 Turn the knob counterclockwise until it loosens.

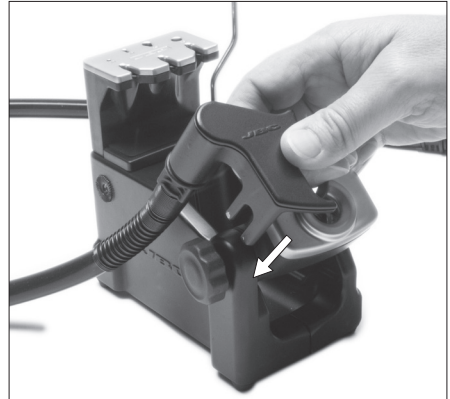

2 Insert the fume inlet duct for modular stands between the knob and the tool holder.





3 Connect the fume inlet duct for modular stands to the accessory for stand aspiration (Ref. FAE030/FAE040).



4 The system detects when the tool is returned to the stand and the vent absorbs the fumes automatically.

Maintenance

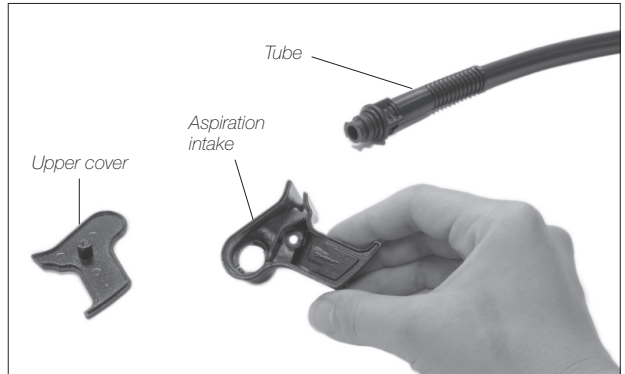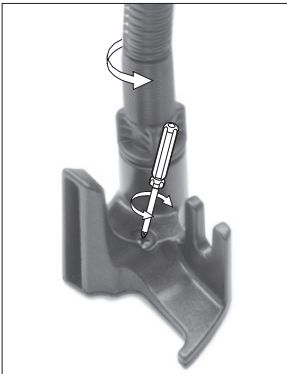

- Before carrying out maintenance, always allow the tool to cool.
- Remove the screw and loosen the upper cover.
- Clean the inside of the aspiration intake with a cleaning stick.
- To clean the tube, loosen it from the aspiration intake by turning it. Then shake the tube to remove the dirt.

Specifications

- Weight: 170 gr (0.02 lb)
- Length: 107 cm (42.1 in)

Complies with CE standards.
ESD protected.

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Register your warranty within 30 days of purchase in www.jbctools.com/productregistration



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

www.jbctools.com