

# JBC

[www.jbctools.com](http://www.jbctools.com)



## Nano Handle

Ref. NT105-A

# Packing List

The following items should be included:

**Nano handle** ..... 1 unit  
Ref. NT105-A

**Grip for NT105-A** ..... 1 unit  
Ref. 0018662


**Manual** ..... 1 unit  
Ref. 0009336 (*Nano handle*)  
0018668 (*Grip for NT105-A*)



# Features

**Control unit**  
Ref. NAE-1B  
NAE-2B  
NAE-9B

**Nano handle**  
Ref. NT105-A

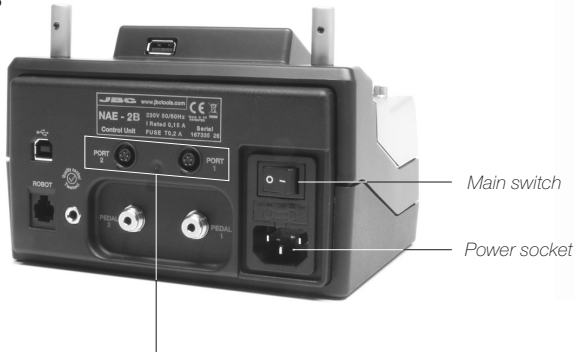


## Changing grips


1. Push the grip with the tabs onto the handle.

Grip for NT105-A

Nano handle

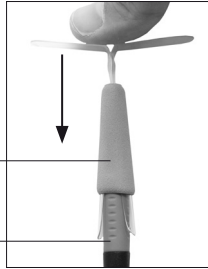


2. To remove the tabs, hold the grip and pull them out. Use a pliers if necessary.

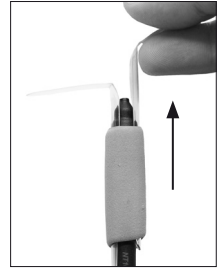

## Changing cartridges


Save time and change cartridges safely without having to switch the station off.

### Removing

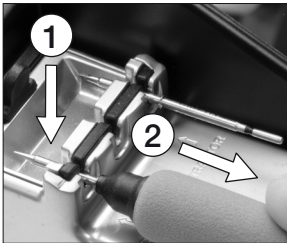


Place the cartridge in the slot as shown and pull the handle to remove it.

### Inserting

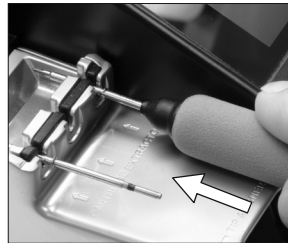

Push the cartridge into the handle to the mark\*.


### Aligning

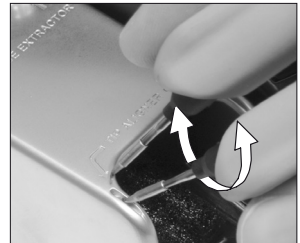

Use the holes to rotate the cartridges for a proper alignment.

### \*Important


It is essential to insert the cartridges as far as the mark for a proper connection.

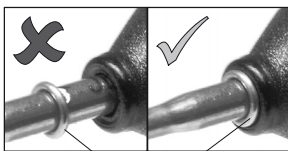

Mark

## Compatible cartridges

The **NT105-A** works with **C105** cartridges. Find the model that best suits your soldering needs in [www.jbctools.com](http://www.jbctools.com)

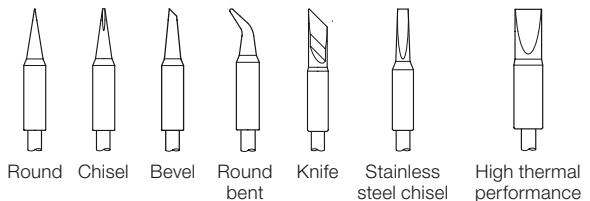

Round

Chisel

Bevel

Round bent

Knife

Stainless steel chisel

High thermal performance

# Specifications

- Weight: 24 gr (0.05 lb)
- Cable length: 120 cm (47.24 in)

Complies with CE standards  
ESD protected

# JBC

## Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.  
In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

**[www.jbctools.com](http://www.jbctools.com)**