

# **JBC**

[www.jbctools.com](http://www.jbctools.com)

## **INSTRUCTION MANUAL**




## **Extractor-Inserter Cartridge Stand**

Ref. SC-C

# Packing List

Extractor-Inserter  
 Cartridge Stand ..... 1 unit  
 Ref. SC-C


Manual ..... 1 unit  
 Ref. 0021043

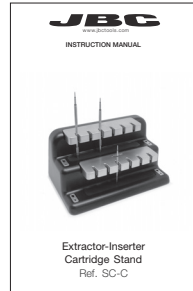


## Features

The JBC Cartridge Stand holds up to 12 models of C210 and C245 cartridges. Moreover the SC-C has two different positions:  
**(1)** The internal position for C210 cartridges.  
**(2)** The external position for C245 cartridges, as the image below.


Find the ones that best suit your soldering needs at: [www.jbctools.com](http://www.jbctools.com)

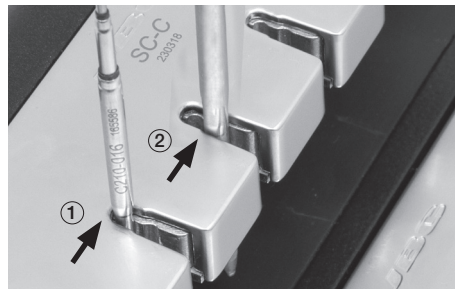

### C210 Cartridges

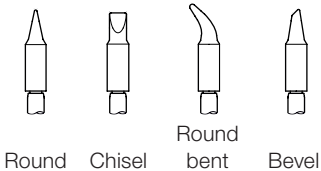

### C245 Cartridges

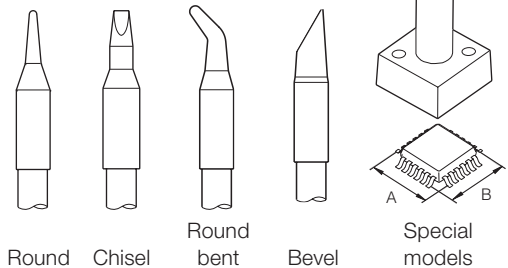


## Changing cartridges

Save time and change cartridges without switching off the station.


### Inserting

To insert the cartridges, push the handle into the cartridge as the image.

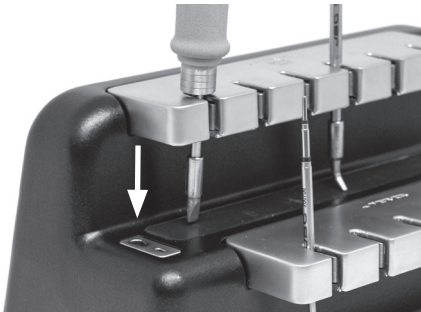

### Aligning

Use the appropriate hole to push the cartridge into the handle as far as the mark\*. Also can be used to rotate the cartridges (for C245 or C210) for a proper alignment.

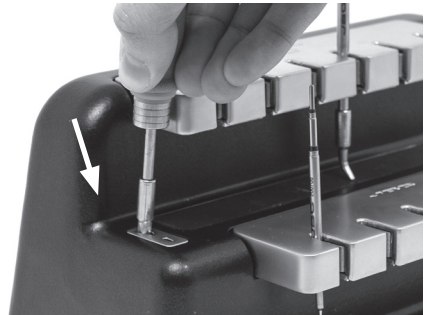

### \*Important

It is essential to insert the cartridges as far as the mark for a proper connection.



### Removing

Place the cartridge in the slot and pull the handle to remove it.



# Specifications

- Net Weight: 4.2 kg (9.3 lb)
- Dimensions: 210 x 140 x 110 mm

Complies with CE standards  
ESD protected

# JBC

## Warranty

JBC's two-year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

**Register your warranty within 30 days of purchase in [www.jbctools.com/productregistration](http://www.jbctools.com/productregistration)**



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

**[www.jbctools.com](http://www.jbctools.com)**