


INSTRUCTION MANUAL

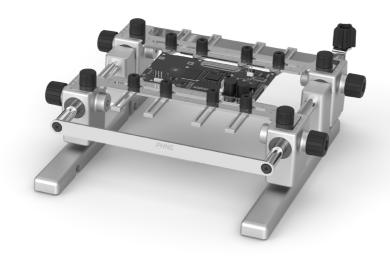

PHNS


Support for PCBs up to 11x7cm/4x3"

This manual corresponds to the following reference:

PHN-SA

Packing List

The following items are included:

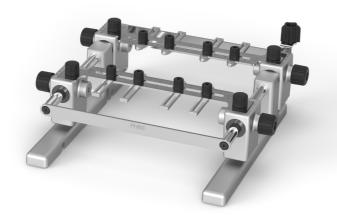








Features and Connections

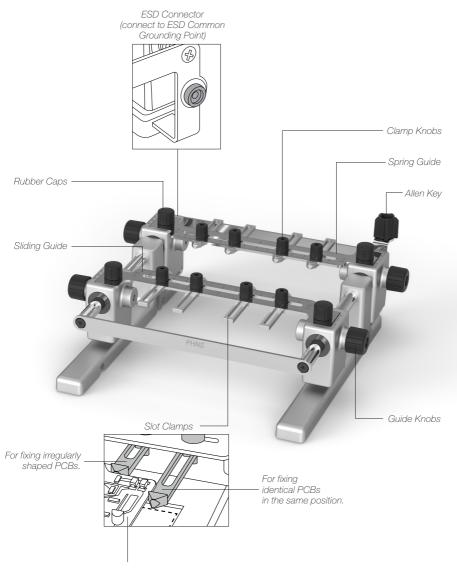


Max. PCB dimension (between clamps): 11x7 cm / 4x3 in, Thickness 6 mm / 0.236 in

Height Adjustment

PHNS Support allows adjustment for 3 heights between the PCB and the Heating Area of the Preheater Unit.


Low level 22 mm / 0.87 in



Unscrew these knobs to place the support in the lowest level




Medium level 45 mm / 1.77 in




Use the fixing brackets to place the support in the medium and the high level




High level 65 mm / 2.56 in

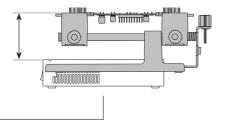


To change the height to the highest level, proceed as follows:

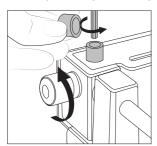

1. Remove the 4 clamp knobs and the 4 black rubber caps.

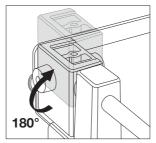

2. After removing both guides, turn 180° the guide supports.

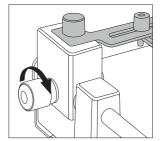

3. Place the guides and the rubber cups and adjust the sliding clamp knobs again.




Fast PCB Replacement

PHNS Support lets you replace PCBs of the same batch fast and easily. Use the sliding guides to change the PCBs.


Removing PCB

Loosen one sliding guide, pull back and lift out the PCB.

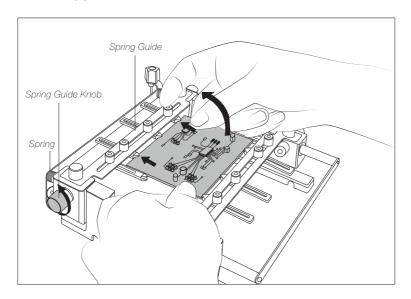

Placing another PCB

Position it and tighten the sliding guide knobs.

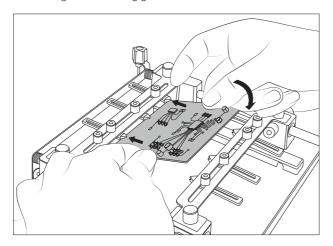



Adjustable slot clamps for PCB fixation.

Maintenance

Before carrying out maintenance or storage always allow the support to cool down.

- Check periodically that the Support is clean, especially the axes of the sliding guide.
- Use a damp cloth when cleaning. Alcohol can only be used to clean the metal parts
- Replace any defective or damaged piece. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.





Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- The temperature of accessible surfaces may remain high after the unit is turned off. Handle with care.
- Be careful with the remains of liquid tin. In contact with the skin, it can cause burns.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the smoke produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- This appliance can be used by children over the age of eight as well as persons with reduced physical, sensory or mental capabilities or lacking experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

Specifications

PHNS

Support for PCBs up to 11x7cm / 4x3"

Ref.: PHN-SA

- Total Net Weight:

- Dimensions (Low Position):

 $(L \times W \times H)$

- Dimensions (High Position):

 $(L \times W \times H)$

- Max. PCB Dimensions (Between Clamps):

1.9 kg / 4.2 lb

238 x 237 x 75 mm

9.4 x 9.3 x 3 in in

238 x 237 x 96 mm

9.4 x 9.3 x 3.8 in

11 x 7 cm / 4 x 3 in,

Thickness 6 mm / 0.236 in

- Total Package Dimensions / Weight:

 $(L \times W \times H)$

280 x 280 x 164 mm / 2.4 kg 11.02 x 11.02 x 6.45 / 5.29 lb

Complies with CE standards.

ESD safe.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.





