

# JBC

[www.jbctools.com](http://www.jbctools.com)



## Heating Element for DR560

Ref. DSV-DR

## Packing list

The following items should be included:

**Heating element** ..... 1 unit

Ref. DSV-DR

*Tip not included*

**Internal gasket** ..... 1 unit

Ref. 0019208




## Changing the heating element

For this operation, turn off the station or disconnect the tool and wait until the tool temperature drops to room temperature.

### 1. Removing


Loosen the deposit lid (a), remove the screw (b) and withdraw the heating element (c).

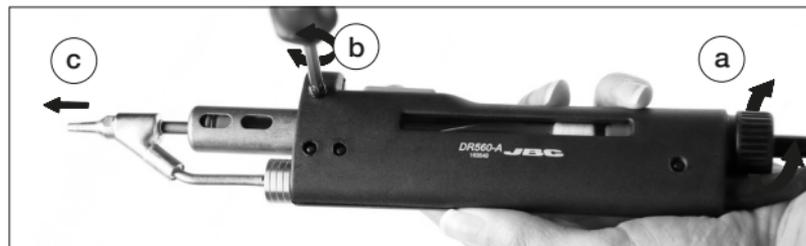

**Recommended:** Remove the lid in a vertical position and follow the cleaning guidelines in the tool and station manuals.

## 2. Placing


Insert the new one (a), tighten the lid (b) and then the screw (c).

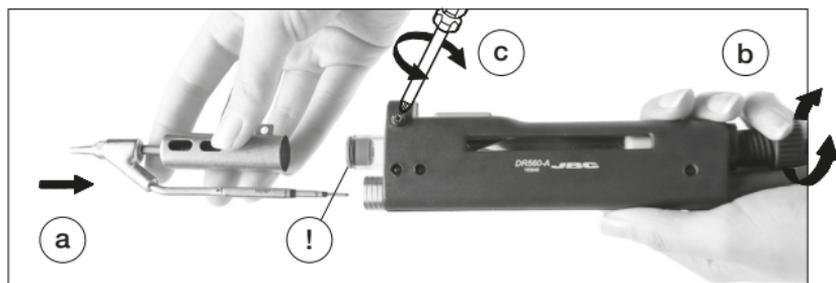

**!** **Important:** Before placing, make sure to insert the internal gasket into the Tin deposit.



**Important:** For a proper connection it is essential to insert the cartridge as far as the mark.

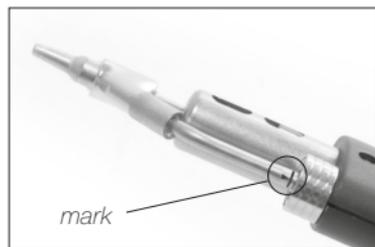

### Compatibility

The DSV-DR also works with the previous version DR5600 Desoldering Iron (Ref. 5600010). In this case, you must take out the washer with a pliers.



# JBC

---

## Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased. Please register your product warranty within 30 days of purchase in [www.jbctools.com/productregistration](http://www.jbctools.com/productregistration).

---



This product should not be thrown in the garbage. In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

**[www.jbctools.com](http://www.jbctools.com)**