

www.jbctools.com

INSTRUCTION MANUAL



Compact Micro Tweezers Station Ref. CP-QE

Packing List

The following items are included:



CP Control Unit 1 unit Ref. CP-1E (120V) CP-2E (230V) CP-9E (100V)



Adjustable Micro Tweezers 1 unit Ref. AM120-A

weezers Station

Ref. CL6210



Power Cord 1 unit Ref. 0023714 (230V) 0023715 (120V) 0024092 (100V)



Sponge 1 unit Ref. S0354



*No cartridges are included







*No cartridges are included


Adjustable stand


Adjust the tool stand to suit your work position.



Cable collector (Ref. CC3702)

Place the cable on the collector so that the working area is free of cable.

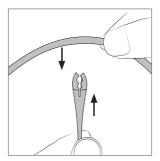

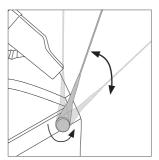

Tip Cleaner


Select the option to suit your needs and improve the thermal transfer of the tip.

Splashguard

Ref. 0017576 When using the brass wool. it prevents splashing of solder particles.

Antisplash Membrane Ref. 0017574

Prevents splashing and keeps the work area clean.

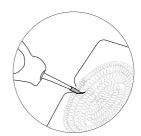

If the tip is very dirty, JBC recommends first cleaning it with the wiper to remove excess solder.


Wiper Ref. CL0160

A temperature resistant receptacle for removing excess solder by gently tapping or wiping.

Brass Wool

Ref. CL6210 Very effective cleaning method. Leaves a small layer of solder on the tip preventing oxidation between cleaning and rewetting.




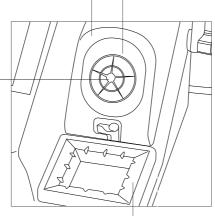




Removing the splashguard:

1. Unlock the splashguard.

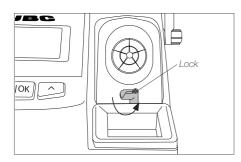

2. Remove it.

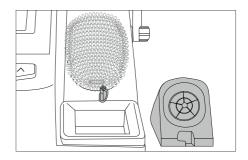

More cleaning options (not supplied):




Inox Wool Ref. CL6205 Provides a superior cleaning of the tip.



Metal Brush Ref. CL6220 When used carefully, it provides a more


thorough cleaning.

Wiper

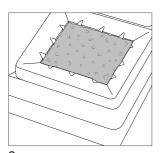


Sponge Ref. S0354 The least harmful cleaning method. Keep the sponge damp with distilled water to avoid tip wear.

Tapping:

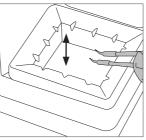

Tap gently to remove excess solder.


Wiping:

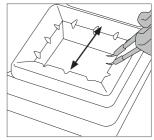

Use the slots to remove remaining particles.


AM120 Changing cartridges

1. Removing

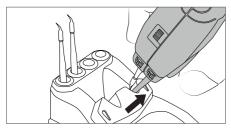


Place the cartridges in the extractor and pull the tweezers to remove them.

3. Inserting

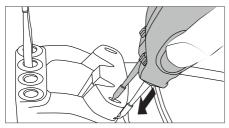


Use the grooves to insert the cartridges as far as the mark*.

4. Rotational Cartridge Alignment

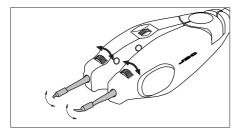

Slightly turn the wheels to align the cartridges as required.

2. Positioning

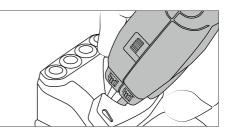


Place the tweezers on top of the new cartridge and slightly press down.

*Important

It is essential to insert the cartridges as far as the mark for a proper connection.



5. Vertical Cartridge Alignment

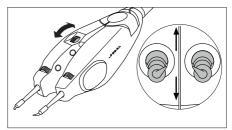

The rear wheel allows the cartritges to be equally aligned when you close the tweezers.



USB Connector

Download the latest software from our website to update your soldering station.

JBC Updater

www.jbctools.com/software.html


Update the station software via USB connection:



JBC Manager

www.jbctools.com/manager.html

Manage and monitor as many stations as your PC can handle by using the JBC Manager. You can export data to another PC.

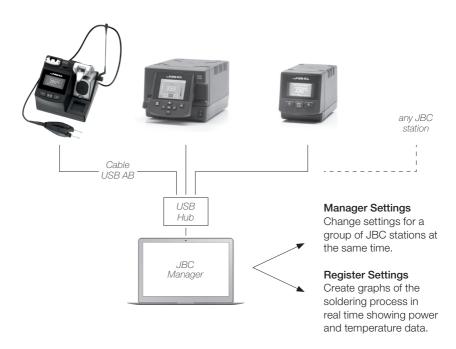


Operation

The JBC Exclusive Heating System

This revolutionary technology is able to recover tip temperature extremely quickly. This allows the user to work at a lower temperature. As a result, tip life increases by 5.

1. Work





When the tool is lifted from the stand the tip will heat up to the selected temperature.


· Select temperature levels

· Fix one temperature




When the tool is in the stand, the temperature falls to the preset sleep temperature.

3. Hibernation

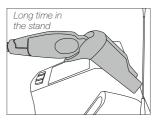

After longer periods of inactivity, the power is cut off and the tool cools down to room temperature.

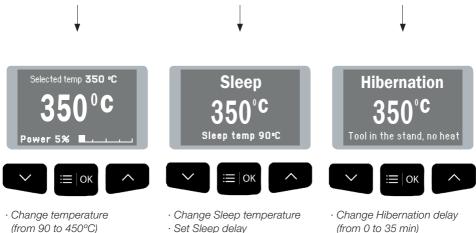

· Set Sleep delay


(from 0 to 9 min or no Sleep)

(from 0 to 35 min)



Control Process

Work Screen

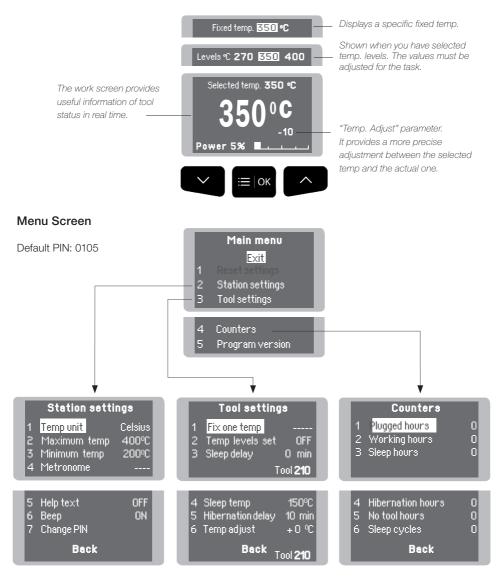

Troubleshooting

Station troubleshooting available on the product page at www.jbctools.com

Parameters

Be careful when using these parameters as they may reduce the tip life if not used properly. Please follow the recommended guidelines:

Station Settings

Parameter description	Recommendations	Warnings
Temperature unit Celsius (°C) or Fahrenheit (°F)	N/a	
Maximum temperature Set the maximum temperature to work with. Max. temp by default is 400°C (750°F). This is considered high enough to work with most lead-free applications.	The station temperature range is 90-450°C (190-840°F). Change the temperature limits when working with less common	In most cases, working with temperatures over 400°C (750°F) can damage the PCB and its components. Even in short time periods of tip contact with the soldering joint, the flux may not work properly and could seriously reduce
Minimum temperature Set the minimum temperature to work with. Min. temp. by default is 200°C (392°F). This is considered to be a proper starting point for leaded applications.	applications such as low / high melting point soldering (HMP) or plastics (e. g. riveting).	tip life. If the solder joint requires more power (e.g. multilayered or high dissipation boards), JBC strongly recommends using other aids like preheaters.
Metronome This activates a beep sound. Frequencies vary from 1 to 50 seconds.	Useful for setting a work rate in repetitive jobs. The beep lets you know the length of time the tip must be in contact with the soldering joint.	N/a
Help text Activate this parameter to receive info from the system.	N/a	N/a
Beep Enable/disable the beep sound of the keypad.	N/a	N/a
Change pin Change the default security PIN number (0105).	The PIN must be entered every time a parameter is changed.	N/a



Tool Settings

Parameter description	Recommendations	Warnings
Fix one temperature Fix a value within the temperature range of the station (90-450°C/190-840°F).	Ideal for soldering more than one component at a specific temperature. The station will reject any attempt to change the temperature.	N/a
Temperature levels set Similar to "Fix one temp" parameter. In this case, the user can set up to 3 values for different power requirements.	This allows a quick change between 3 different tempe- ratures. Set them according to the allowed values for your soldering applications.	N/a
Sleep delay Set the time that the tool will remain at the selected temperature when in the stand before entering sleep mode. The tip temperature will then drop to the Sleep temperature.	Because our tools reach the working temperature from the deafult Sleep mode in only a few seconds, this parameter is preset to 0 min. Once the tool is returned to the stand the temperature will automatically drop to the sleep temperature, extending tip life and avoiding oxidation. Retinning the tip before placing the tool in the stand will protect the tip and extend its life.	Setting these parameters to higher values will unnecessarily accelerate oxidation and shorten tip life especially when working with temperatures up to 450°C (840°F).
Sleep temperature This is the set temperature the tip reaches when returned to the stand.	The sleep temperatures are set to achieve a balance between preventing oxidation and reaching the working temperature in a few seconds.	

Tool Settings

This function completely protects the tip from oxidation during long periods of inactivity while the tool is in the stand. Retinning the tip before placing the tool in the stand also helps prevent oxidation and extends the life of the tip	⚠ Increasing the default value will accelerate oxidation and shorten the tip life.
	protects the tip from oxidation during long periods of inactivity while the tool is in the stand. Retinning the tip before placing the tool in the stand

Temp Adjustment

It provides a more precise adjustment between the selected temperature and the actual one. Set values within ±50°C (± 90°F) to achieve zero error. JBC strongly recommends the use of TID-A or TIA-A Thermometers to obtain precise readings.


/ When the user changes the cartridge type, the parameter should be reset to 0°C/F or to the value needed for this cartridge. E.g. If a correction of +20°C (+36°F) is set for the C245966 (thick type) and then the user changes the cartridge for a C245030 (which is thinner) without resetting, they would be working at a temperature of +20°C (+36°F) lower for the C245030 which does not need any temperature adjustment.




Maintenance


Before carrying out maintenance, always allow the equipment to cool.

- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used when cleaning the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool status.
- Maintain tip surface clean and tinned prior to storage in order to avoid tip oxidation.
 Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.
- Replace a blown fuse as follows:
- 1. Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.

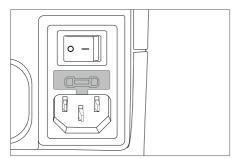

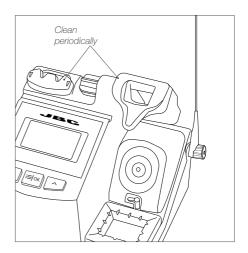

2. Insert the new fuse into the holder and return it to the station.

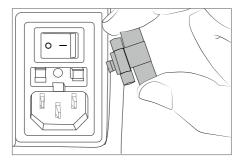

- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflamable products to ignite.
- Avoid the contact of flux with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.



Notes

Specifications

CP-1QE 120V 50/60Hz. Input fuse: 2A. Output: 23,5V. Control Unit model: CP-1E CP-2QE 230V 50/60Hz. Input fuse: 1A. Output: 23,5V. Control Unit model: CP-2E CP-9QE 100V 50/60Hz. Input fuse: 2A. Output: 23,5V. Control Unit model: CP-9E

 Output Peak Power CD-SE: Temperature Range: Idle Temp. Stability (still air): Temp accuracy: Temp adjustment: Tip to ground voltage: Tip to ground resistance: USB connector station-PC 	80W 90 - 450 °C (190 - 840 °F) ±1.5°C (±3°F) / Meets and exceed IPC J-STD-001 ±3% (using reference cartridge) ±50°C (±90°F) Through station menu setting Meets and exceed ANSI/ESD S20.20-2014 IPC J-STD-001F
 Ambient operating temp: Control Unit Weight: 	10 - 50 °C (50 - 122 °F) 2,7Kg (5.96 lb)
- Control Unit Dimensions:	150 x 175 x 145 mm (5.9 x 6.9 x 5.7 in)
- Total Package:	234 x 234 x 258 mm / 3.15 kg 9.2 x 9.2 x 10.2 in / 6.94 lb
Complies with CE standards	

ESD protected housing "skin effect"



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here: https://www.jbctools.com/productregistration/ within 30 days of purchase.



This product should not be thrown in the garbage. In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com